

## Component Locations

[G28 – Engine Speed \(RPM\) sensor \(2.8 ltr. engine\)](#)

[G28 – Engine Speed \(RPM\) sensor \(1.8 ltr. engine\)](#)

[G28 – Engine Speed \(RPM\) Sensor \(2.0 ltr. tdi engine\)](#)