



**2 Ground strap**

- in engine compartment, above right motor mount
- transmission to body