


## Relay arrangement

### Relay location on relay panel

- 1** - Dual Horn Relay (204)
- 2** - Load Reduction Relay (213)
- 3** - free
- 4** - Fuel Pump (FP) Relay (208)
- V** - Wiper/Washer Intermittent Relay (377)
- VI** - Wiper/Washer Intermittent Relay (377)

### Fuses on relay panel

- A** - Fuse for socket I in luggage compartment
- B** - Fuse for socket II in luggage compartment

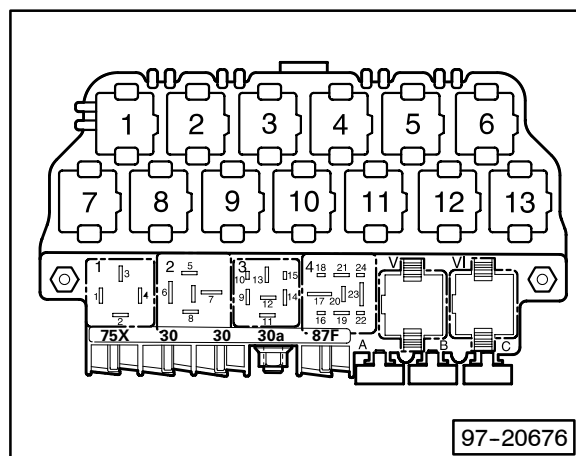

### Relay arrangement on thirteenfold auxiliary relay panel above relay panel

- 1** - Coolant Fan Control (FC)-A/C Relay (214)
- 2** - Relay for motor remote unlock rear lit (79)
- 3** - A/C Clutch relay (267)
- 4** - A/C Clutch control module relay (384)
- 5** - free
- 6** - Selector Lever Light Relay (205)
- 7** - Fog Light Relay (381)
- 8** - Daytime Running Lights Change-Over Relay (173)
- 9** - free
- 10** - Glow Plug Relay (180)
- 11** - Change Over Relay For Speaker Radio/Telephone
- 12** - Starting Interlock Relay-Alarm System (186)
- 13** - Park/Neutral Position (PNP) Relay (175)
  - Starting Interlock Relay-Clutch Position (204)

