


## Relay and fuse arrangements on Relay Panel

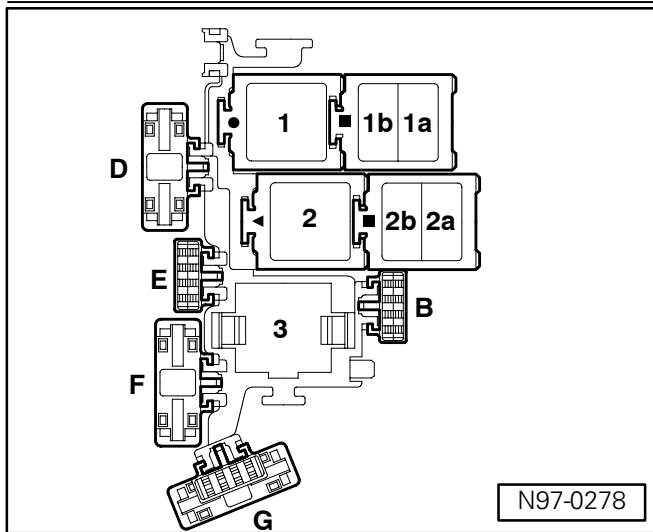

- |          |  |
|----------|--|
| <b>1</b> | <b>Motronic Engine Control Module Power Supply Relay (167), engine code BDP</b>  |
| <b>2</b> | <b>Secondary Air Injection (AIR) Pump Relay (373), (100)</b>   |
| <b>3</b> | <b>Motronic Engine Control Module Power Supply Relay (429), (219)<br/>Auxiliary Engine Coolant (EC) Pump Relay (53), (411)</b> |
| <b>B</b> | <b>Fuse for Injectors (S116), 10 A<br/>Fuse for Auxiliary Engine Coolant (EC) Pump 5A</b>                                      |
| <b>D</b> | <b>Fuse for Secondary Air Pump (S130), 50 A</b>  |
| <b>E</b> | <b>Fuse for Ignition coil terminal (S115) 40 A</b>   |
| <b>F</b> | <b>Engine control Module (ECM) Fuse (S102), 5 A</b>  |
| <b>G</b> | <b>Engine Electronics Fuse (S282), 10A</b>   |