


Relay and fuse arrangements

from May 2002

Relay arrangement on thirteenfold auxiliary relay panel above relay panel

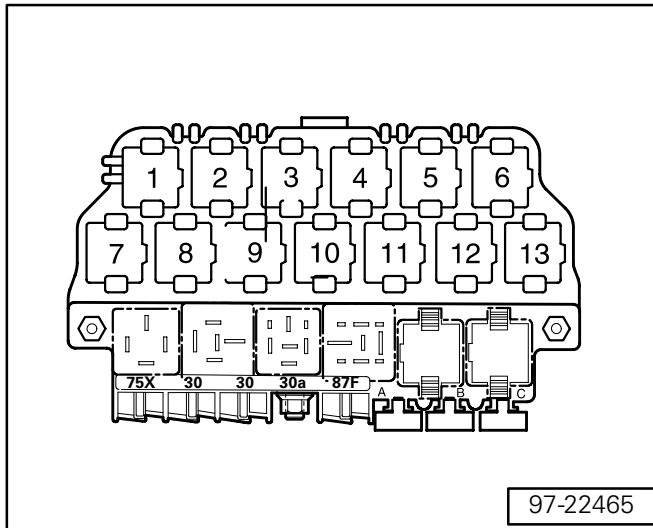

- | | |
|----|--|
| 1 | Coolant Fan Control (FC)-A/C Relay (373) |
| 2 | Sun-Roof Relay (79) |
| 3 | A/C Clutch Relay (267)
A/C Clutch Relay (384) |
| 4 | Daytime Running Lights Change-Over Relay (173) |
| 5 | Taxi Alarm Relay
High Beam Headlight Relay
Emergency Flasher Relay |
| 6 | Selector Lever Light Relay |
| 7 | Fog Light Relay (381) |
| 8 | Control Module for Multi-function steering wheel (451)
Control Module for Multi-function steering wheel (452) |
| 9 | Control Module for Multi-function steering wheel (451)
Control Module for Multi-function steering wheel (452) |
| 10 | Brake Booster Relay (373) |

- 11** **Taxi Alarm Relay
Emergency Flasher Relay (200)**
- 12** **Dual Horn Relay (53)
Taxi Alarm Relay**
- 13** **Park/Neutral Position (PNP) Relay (175)
Starting Interlock Relay-Clutch Position (53)**

Fuses at thirteenfold relay-panel

- A** **Fuse for Taxi, 25 A**
- B** **Fuse for Taxi, 20 A; High Beam Headlight left, 10 A**
- C** **Fuse for Brake System Vacuum Pump, 15 A**
- D** **Fuse for Power Outlet (12 V) Rear Console, 20 A**
- E** **Fuse for Taxi, 5 A; High Beam Headlight right, 10 A**