

Relay arrangements

Relay locations on relay panel

- | | |
|-----------|---|
| 1 | Dual Horn Relay (53) |
| 2 | Load Reduction Relay (370) |
| 3 | free |
| 4 | Fuel Pump (FP) Relay (372) (409) |
| V | Wiper/Washer Intermittent Relay (377) (389)
Wiper/Washer Intermittent Relay/Rainsensor (192) |
| VI | Wiper/Washer Intermittent Relay (377) (389)
Wiper/Washer Intermittent Relay/Rainsensor (192) |

Fuses on relay panel

- | | |
|----------|---|
| A | Fuse for 12v socket I in luggage compartment, 20A |
| B | Fuse for 12v socket II in luggage compartment, 20A |
| C | Fuse for Taxi, 10A |

