



G Fuel level sensor

- in fuel tank; accessible through luggage compartment, right front
- integral with –G6–