



G108 Heated Oxygen Sensor (HO2S) 2 (2.8 ltr. engine)

- in engine compartment, left side, behind cylinder head; integral with heater –Z28–