



G237 Fuel Level Sensor 3

- on top of fuel tank, left side, accessed through luggage compartment floor