



G32 Engine Coolant Level (ECL) sensor

- in bottom of coolant reservoir/expansion tank