

Component Locations

[G42 – Intake Air Temperature \(IAT\) sensor \(2.8 ltr. engine\)](#)

[G42 – Intake Air Temperature \(IAT\) Sensor \(2.0 ltr. tdi engine\)](#)