
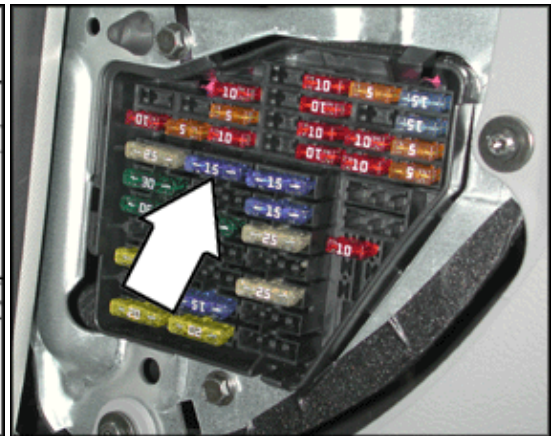



S228 Fuse in fuse holder

- on fuse panel, behind instrument cluster, left
- fuse-28

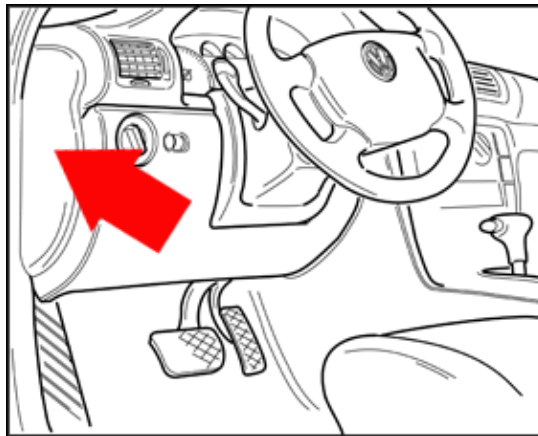



S231 Fuse in fuse holder

- on fuse panel, behind instrument cluster, left
- fuse-31

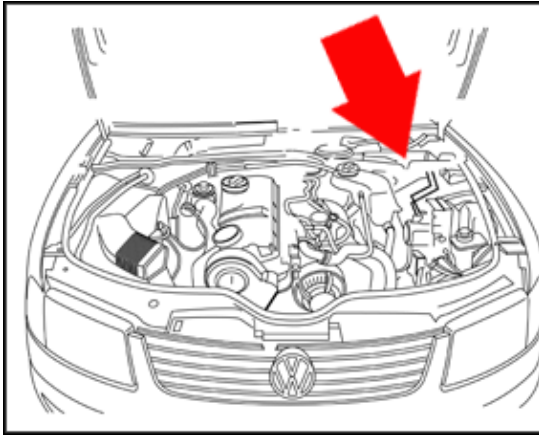


S116 Fuse for injectors

- inside E-box

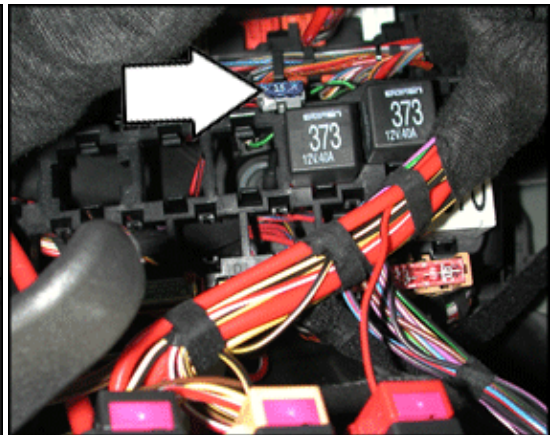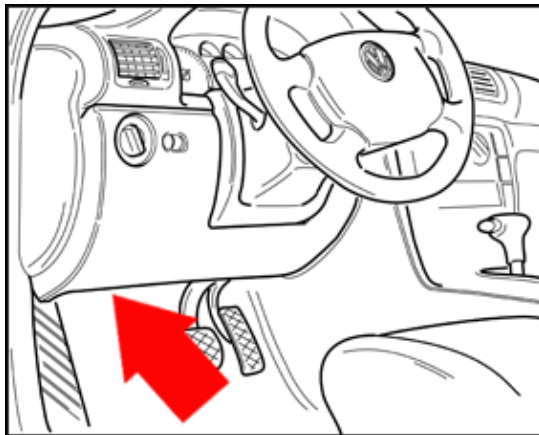



S144 Fuse for central locking/anti-theft warning system

- on eightfold auxiliary relay panel

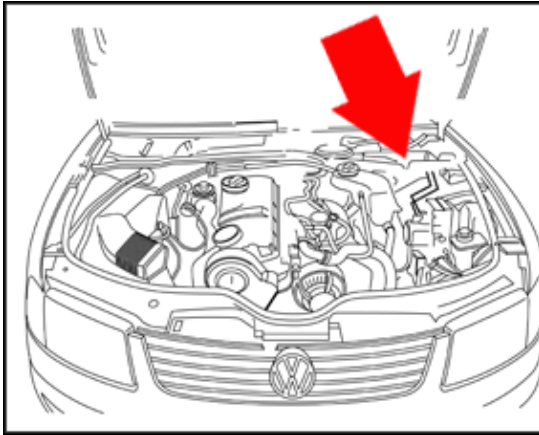


S73 Heated Oxygen Sensor (HO2S) Circuit Breaker

- inside E-box

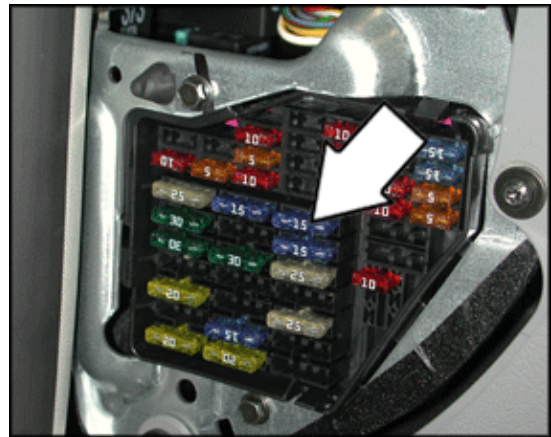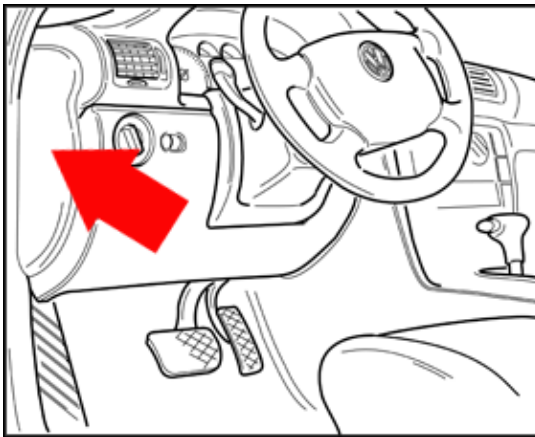

S111 Alarm System and Anti-Theft Engine Disable Fuse

- on fuse panel, behind instrument cluster, left
- fuse-38

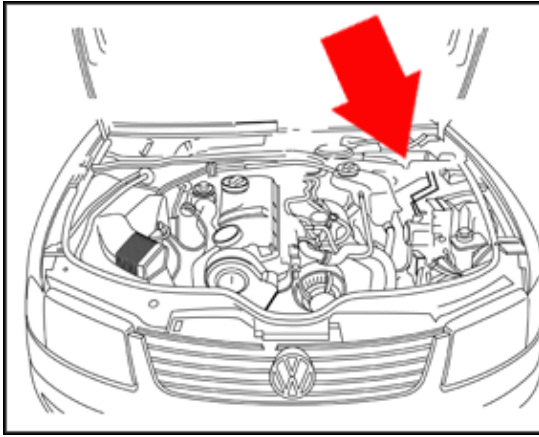

S125 Fuse for glow plug

- inside E-box