



N24 Fresh air blower series resistance with fuse

- in passenger compartment, on heater/evaporator unit to left of fresh air blower V2