



S231 Fuse in fuse holder

- on fuse panel, behind instrument cluster, left
- fuse-31