


Generator (GEN) warning lamp does not light up when ignition is switched on.

Test conditions:

- ◆ Belt tension and battery voltage **OK**.
- ◆ Ground connections (between engine, body and battery) and generator (GEN) connections must be tight and clean (free of corrosion/oxidation).

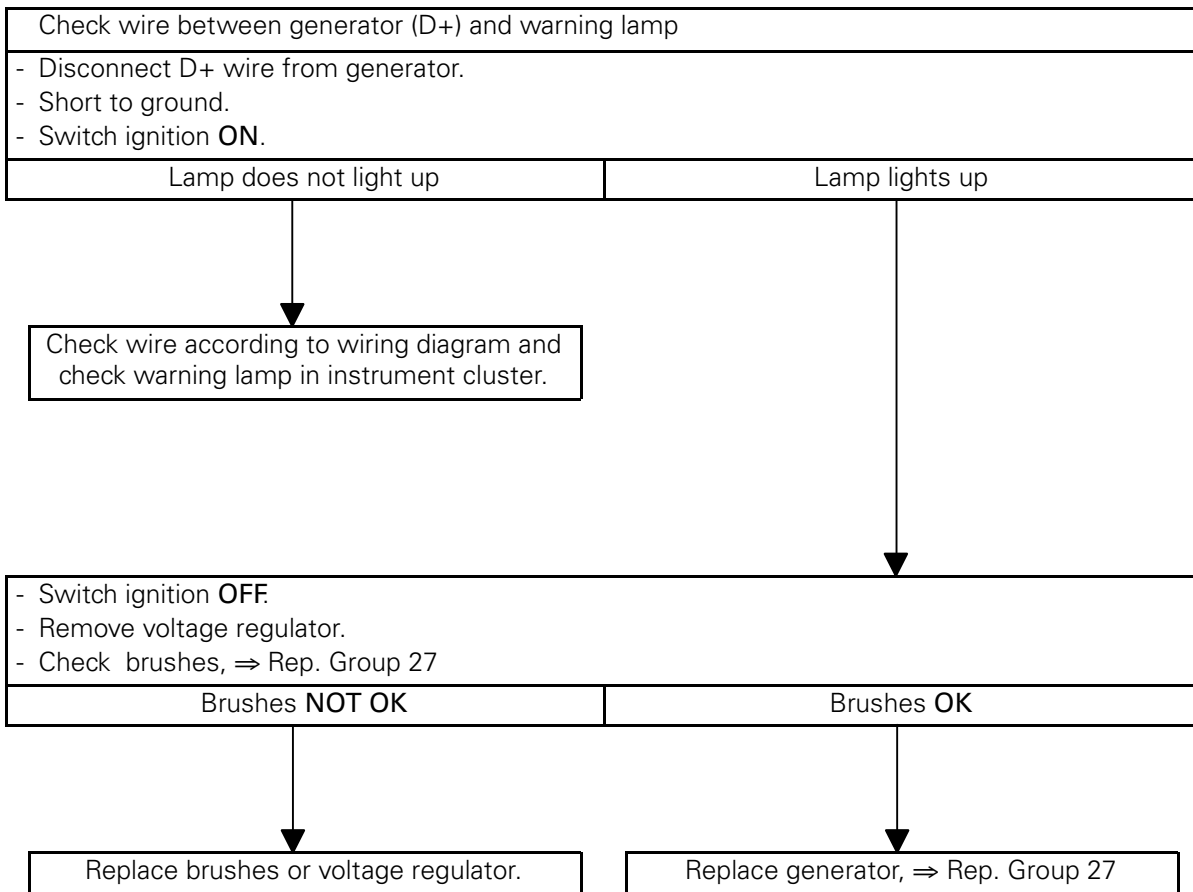

END