


Comfort System, with Alarm System, only for vehicles with green illuminated instrument cluster

from September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

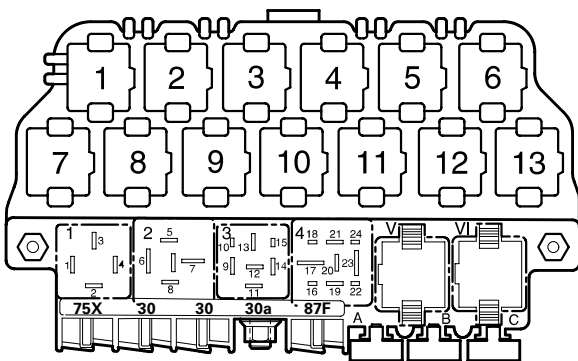


97-20676

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

- 2** Relay for motor remote unlock rear lid (79)


Note: Number in parentheses indicates production control number stamped on relay housing.

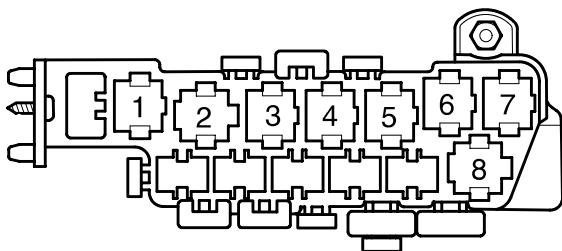

97-20515

Fuse colors


30 A - green
 25 A - white
 20 A - yellow
 15 A - blue
 10 A - red
 7,5 A - brown
 5 A - beige

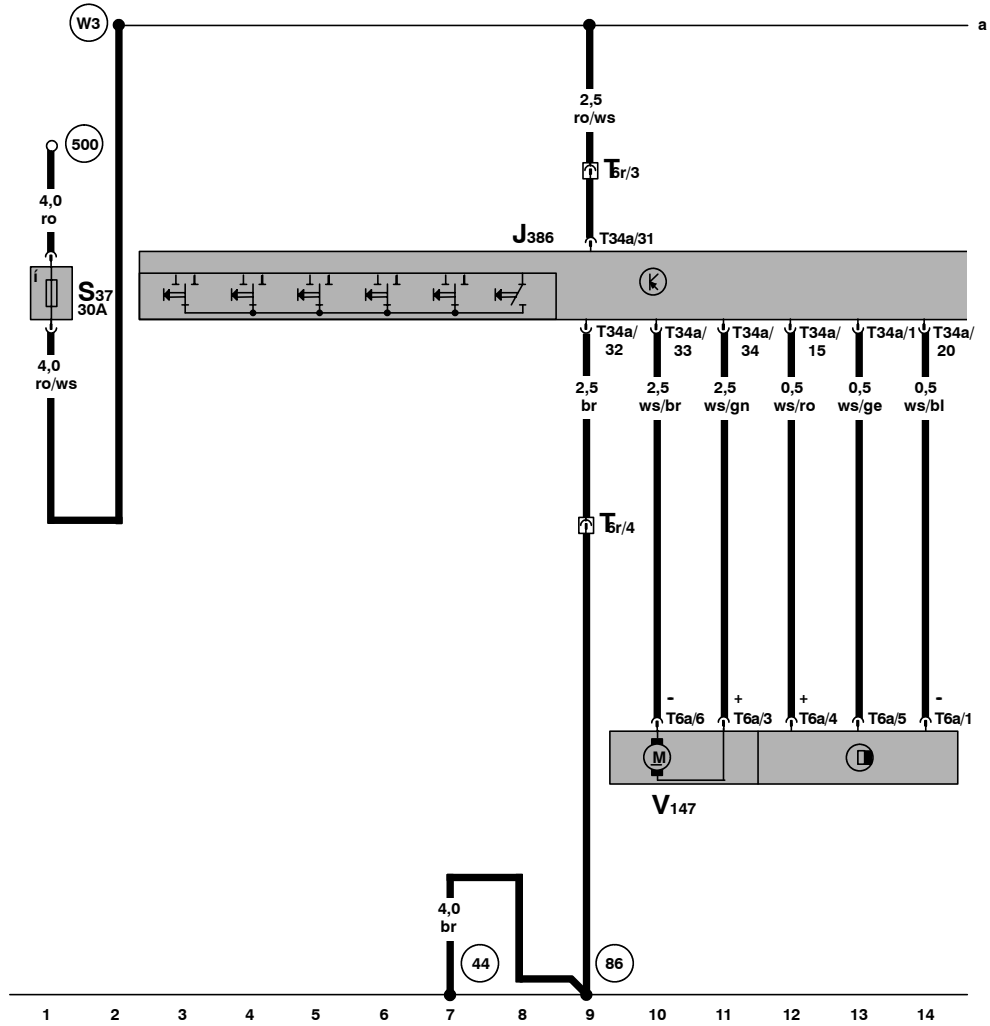

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

97-21870


- J386 - Door control module, driver side
- S37 - Power Window Fuse, on eight position auxiliary relay panel, behind relay panel
- T6a - 6-Pin Connector, black
- T6r - 6-Pin Connector, brown, connector station A-pillar, left
- T34a - 34-Pin Connector
- V147 - Motor for window regulator, driver side
- (44) - Ground connection, on left A-pillar, lower part
- (86) - Ground connection -1-, in rear wiring harness
- (500) - Threaded connection -1- (30) on the relay plate
- (W3) - wire connection, in rear wiring harness

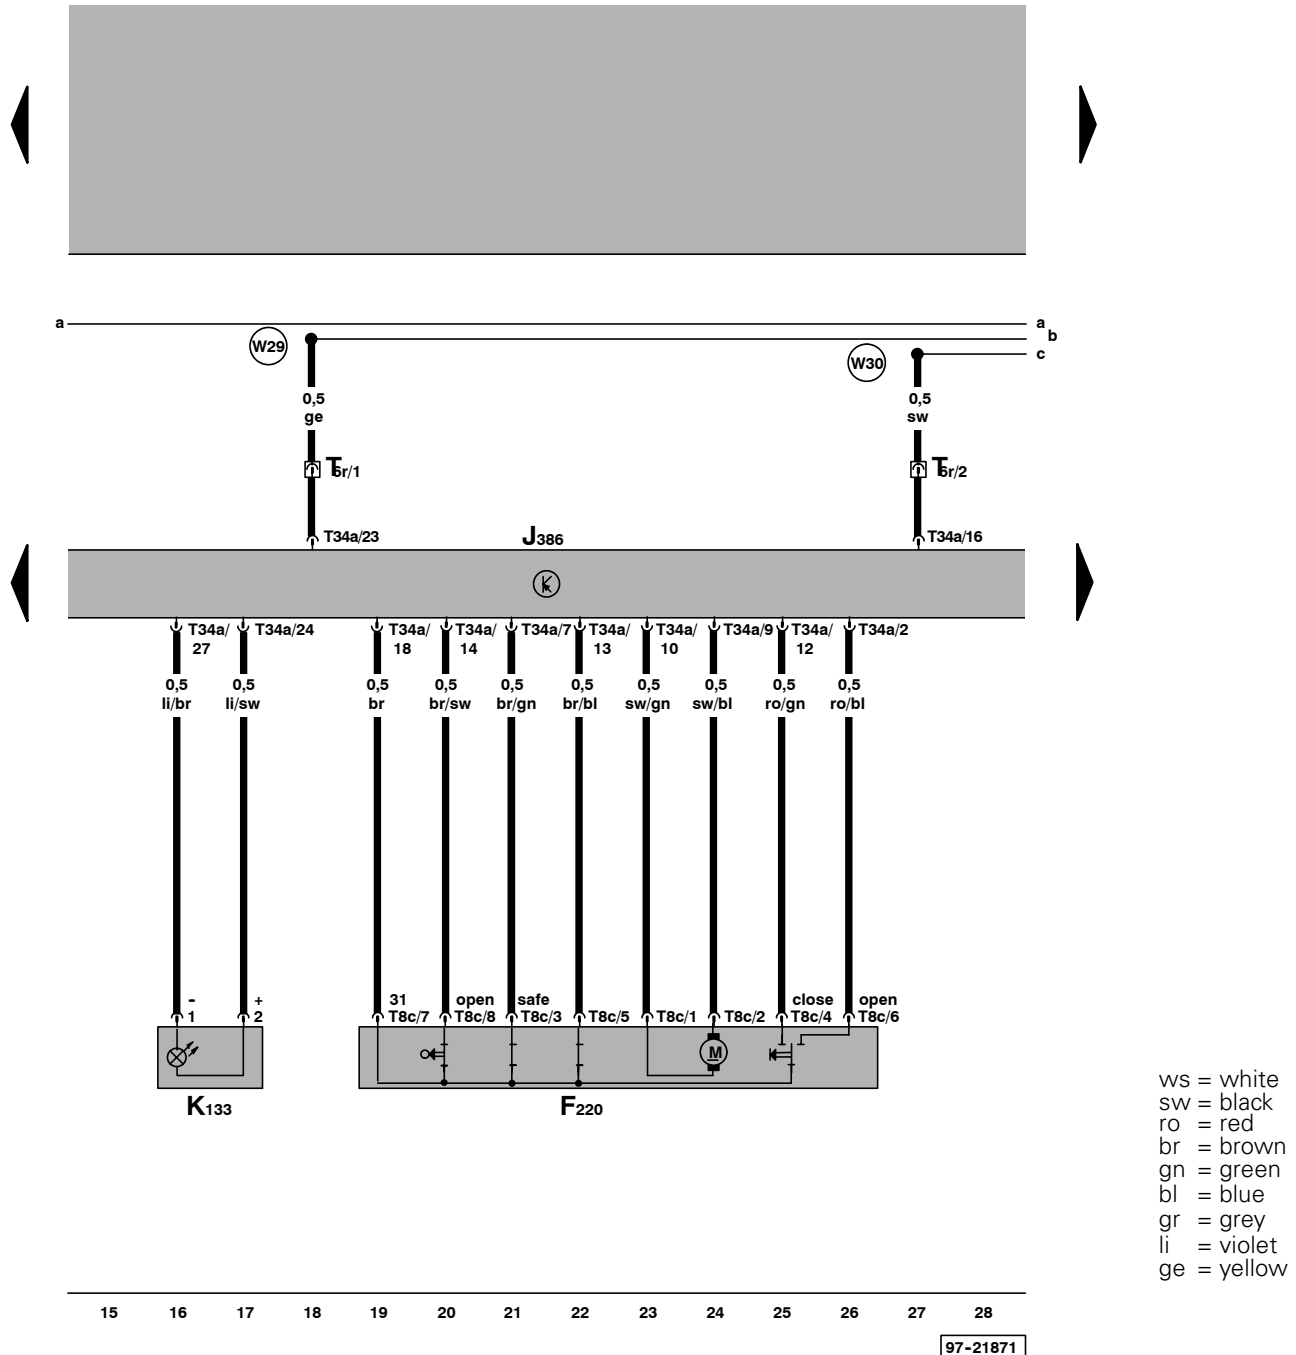

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow


- F220 - Lock unit for central locking, driver side
- J386 - Door control module, driver side
- K133 - Warning light for central locking -SAFE-
- T6r - 6-Pin Connector, brown, connector station A-pillar, left
- T8c - 8-Pin Connector, black
- T34a - 34-Pin Connector

- (W29) - Connection (A-Bus), in floor wiring harness
- (W30) - Connection (B-Bus), in floor wiring harness

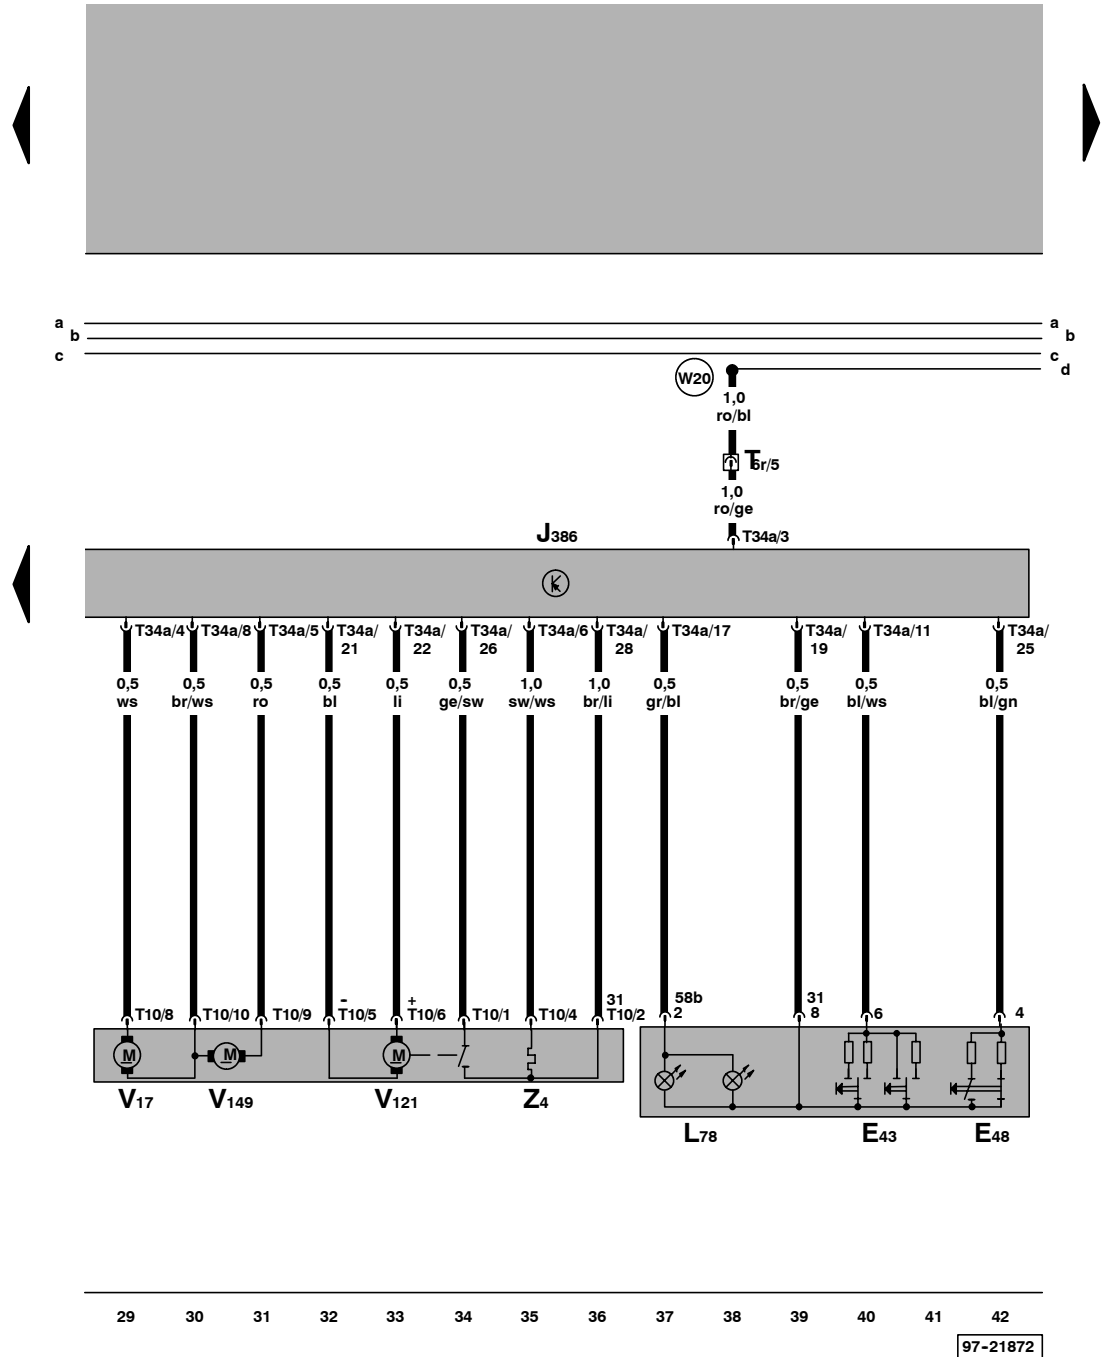


97-21872

- E43 - Mirror Adjustment Switch
- E48 - Mirror Selector Switch
- J386 - Door control module, driver side
- L78 - Mirror Adjusting Switch Light
- T6r - 6-Pin Connector, brown, connector station A-pillar, left
- T10 - 10-Pin Connector, black
- T34a - 34-Pin Connector
- V17 - Driver's Side Mirror Adjustment Motor
- V121 - Motor for fold-in mirror, driver side
- V149 - Motor for mirror adjustment, driver side
- Z4 - Heated outside mirror, driver side
- W20 - Plus connector (30a), in wiring harness, rear

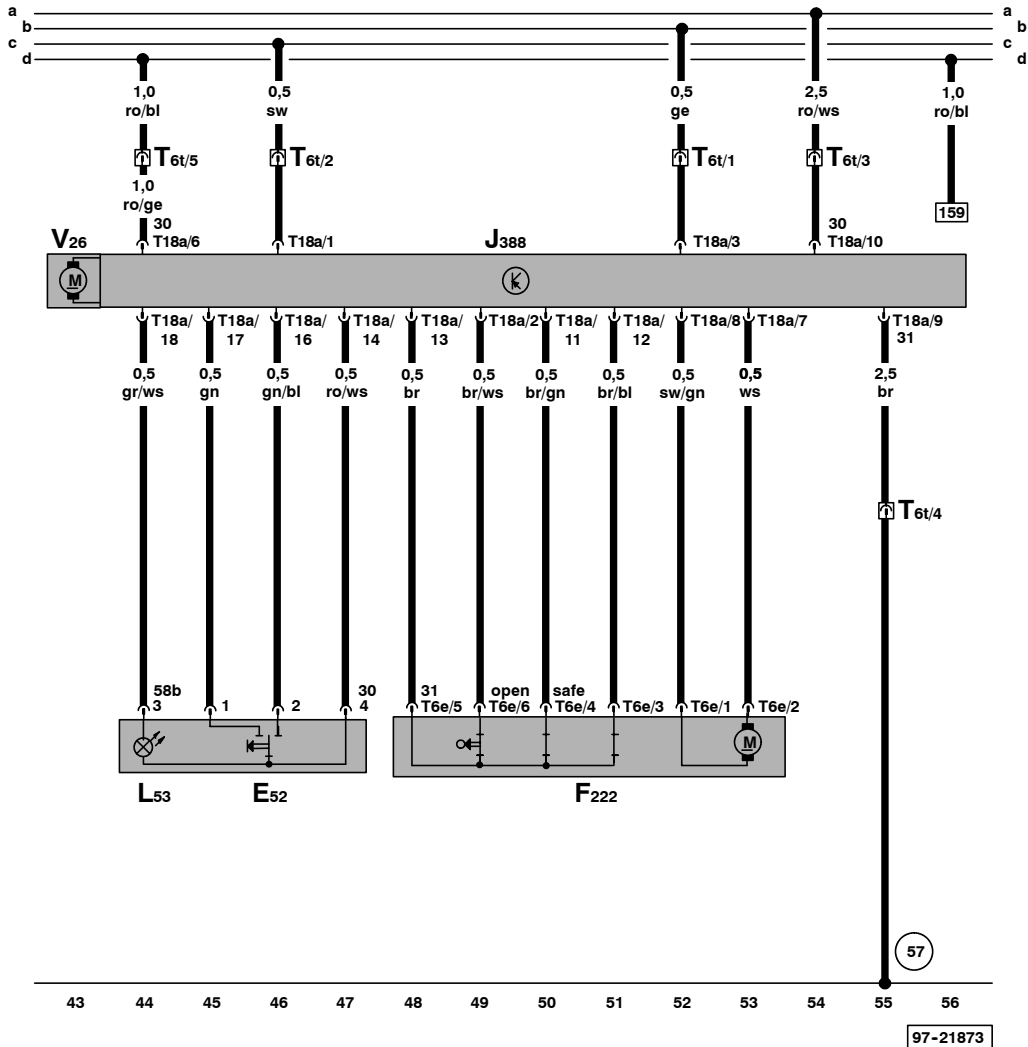

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E52 - Left Rear Window Switch, (In LR Door)
- F222 - Lock unit for central locking, rear, left
- J388 - Door control module, rear, left
- L53 - Power Window Switch Light
- T6e - 6-Pin Connector, brown
- T6t - 6-Pin Connector, brown, connector station
B-pillar, left
- T18a - 18-Pin Connector
- V26 - Motor for window regulator, rear, left
- (57) - Ground connection, on left rear pillar



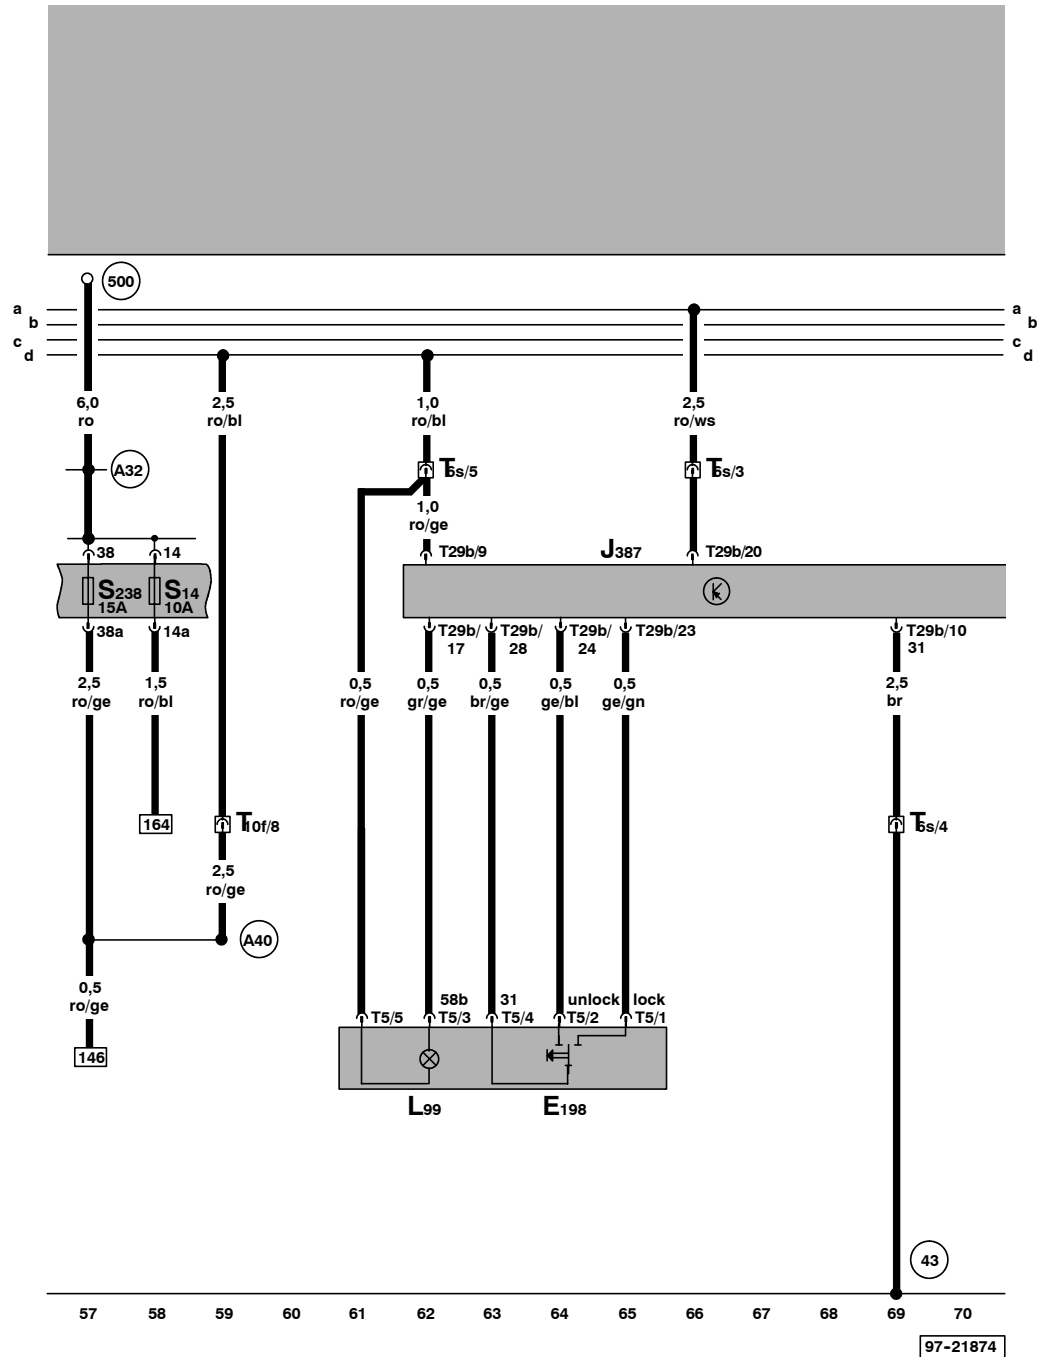


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E198 - Switch for interior lock, passenger side
- J387 - Door control module, passenger side
- L99 - Lighting for switch interior lock
- S14 - Fuse 14 in fuse holder
- S238 - Fuse 38 in fuse holder
- T5 - 5-Pin Connector
- T10f - 10-Pin Connector, blue, connector station
A-pillar, left
- T6s - 10-Pin Connector, brown, connector station
A-pillar, right
- T29b - 29-Pin Connector

- (A32) - plus connection (30), in instrument panel wiring harness
- (A40) - plus connection -1- (30), in instrument panel wiring harness

  - (43) - Ground connection, on right A-pillar, lower part
- (500) - Threaded connection -1- (30) on the relay plate

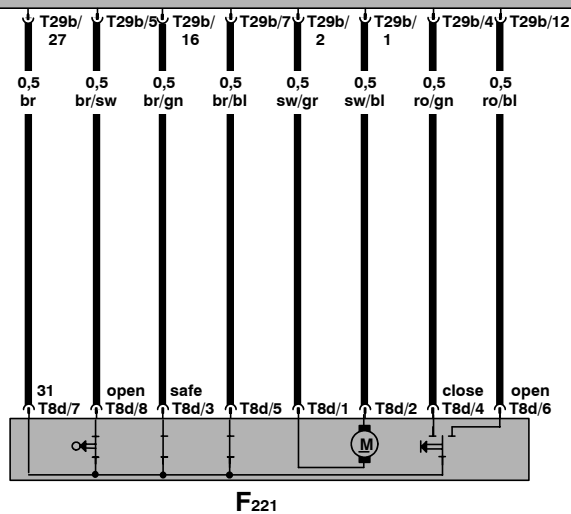


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

71 72 73 74 75 76 77 78 79 80 81 82 83 84


97-21875

- F221 - Lock unit for central locking, passenger side
- J387 - Door control module, passenger side
- T8d - 8-Pin Connector, black
- T29b - 29-Pin Connector

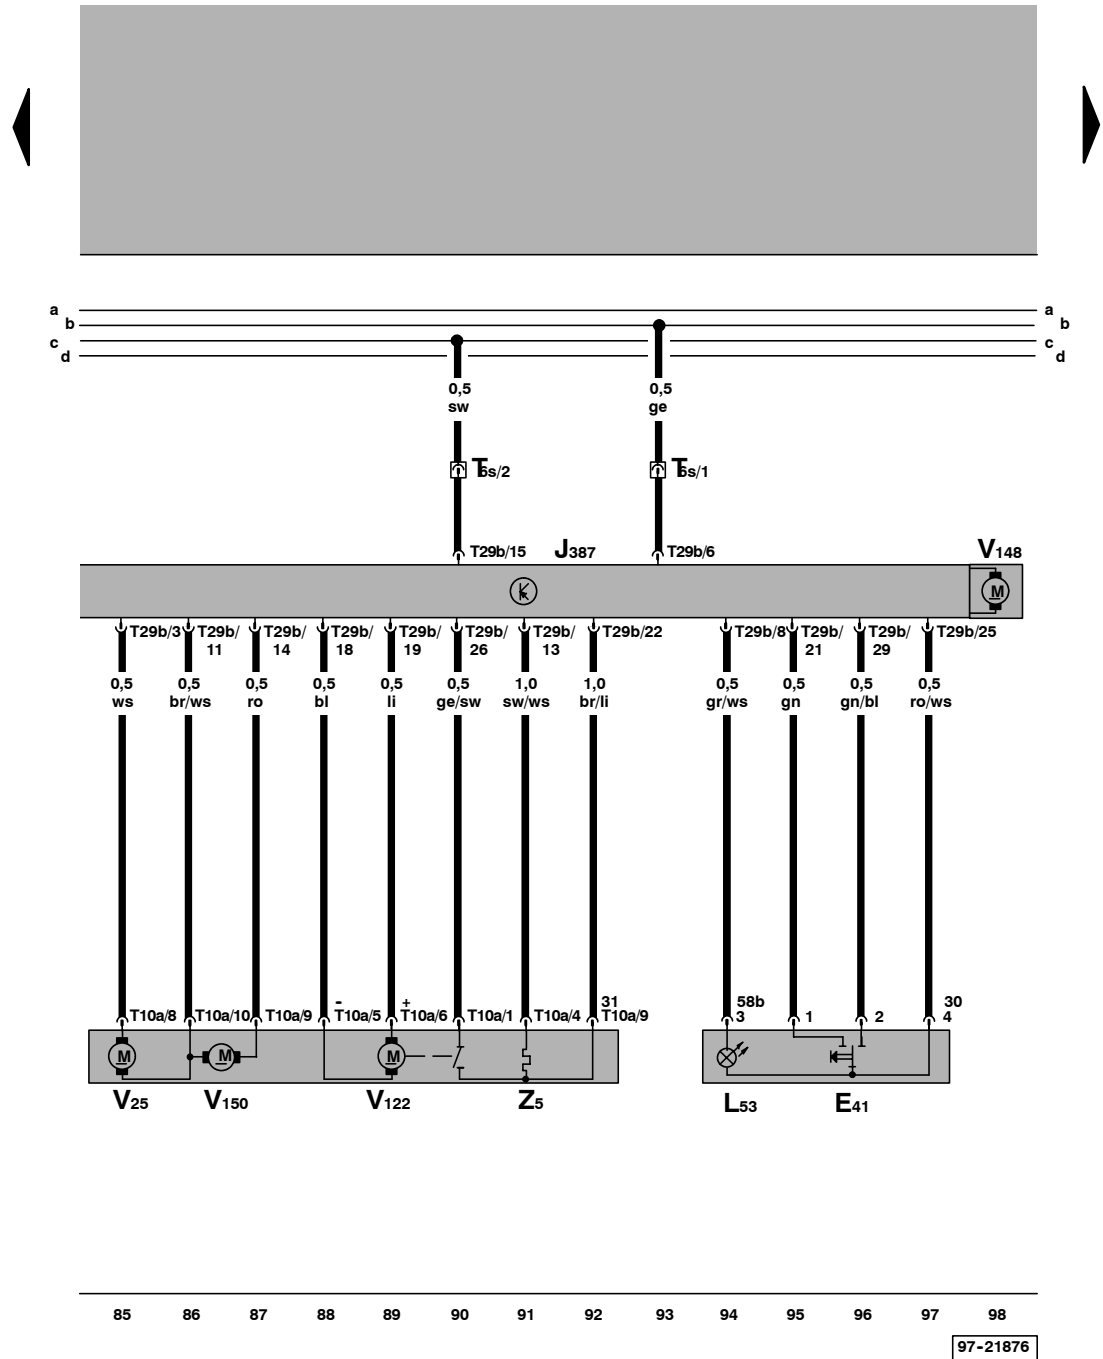


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E41 - Right Front Window Switch
- J387 - Door control module, passenger side
- L53 - Power Window Switch Light
- T6s - 6-Pin Connector, brown, connector station A-pillar, right
- T10a - 10-Pin Connector, black
- T29b - 29-Pin Connector
- V25 - Passenger's Side Mirror Adjustment Motor
- V122 - Motor for fold-in mirror, passenger side
- V148 - Motor for window regulator, passenger side
- V150 - Motor for mirror adjustment, passenger side
- Z5 - Heated outside mirror, passenger side

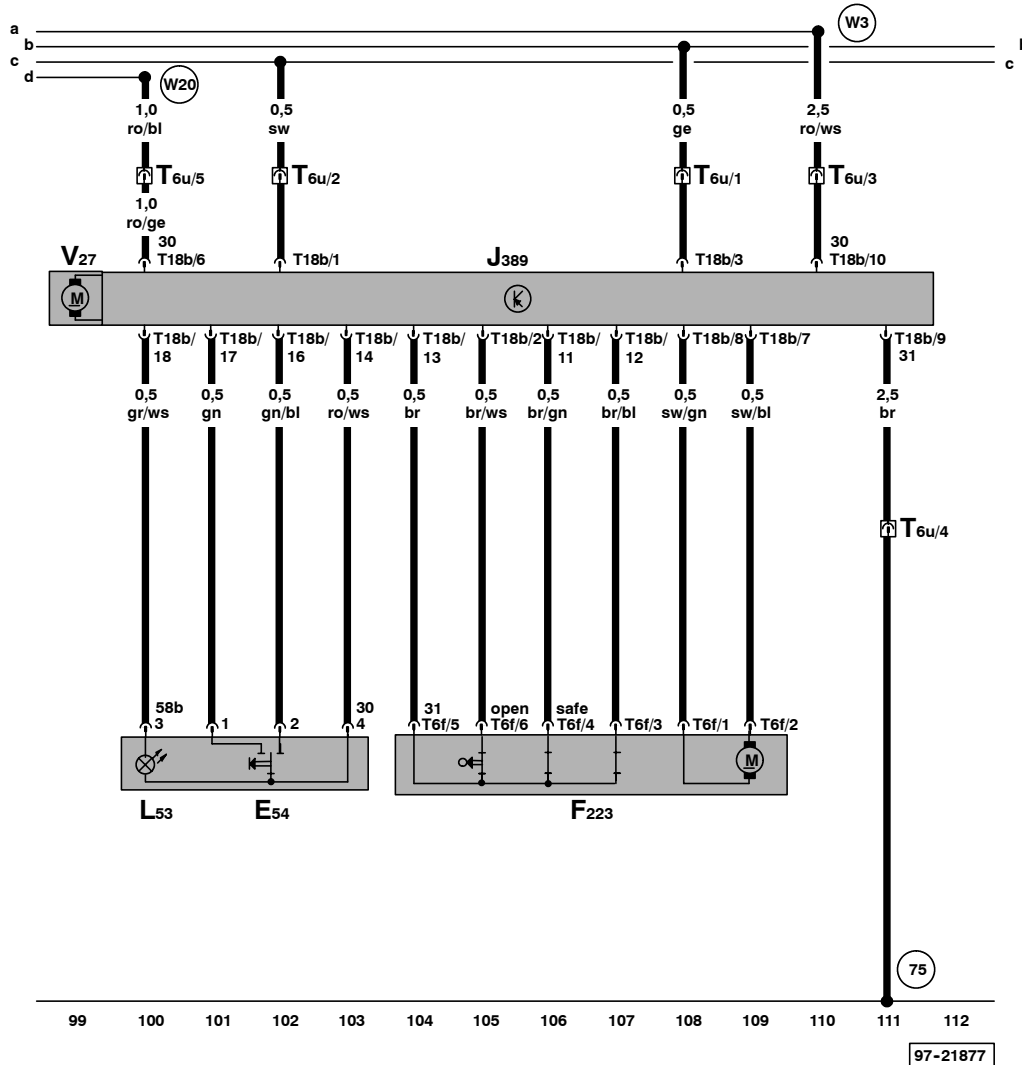

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E54 - Right Rear Window Switch, (In RR Door)
- F223 - Lock unit for central locking, rear, right
- J389 - Door control module, rear, right
- L53 - Power Window Switch Light
- T6f - 6-Pin Connector
- T6u - 6-Pin Connector, brown, connector station B-pillar, right
- T18b - 18-Pin Connector
- V27 - Motor for window regulator, rear, right
- (75) - Ground connection, on right rear pillar
- (W3) - wire connection, in rear wiring harness
- (W20) - Plus connector (30a), in wiring harness, rear

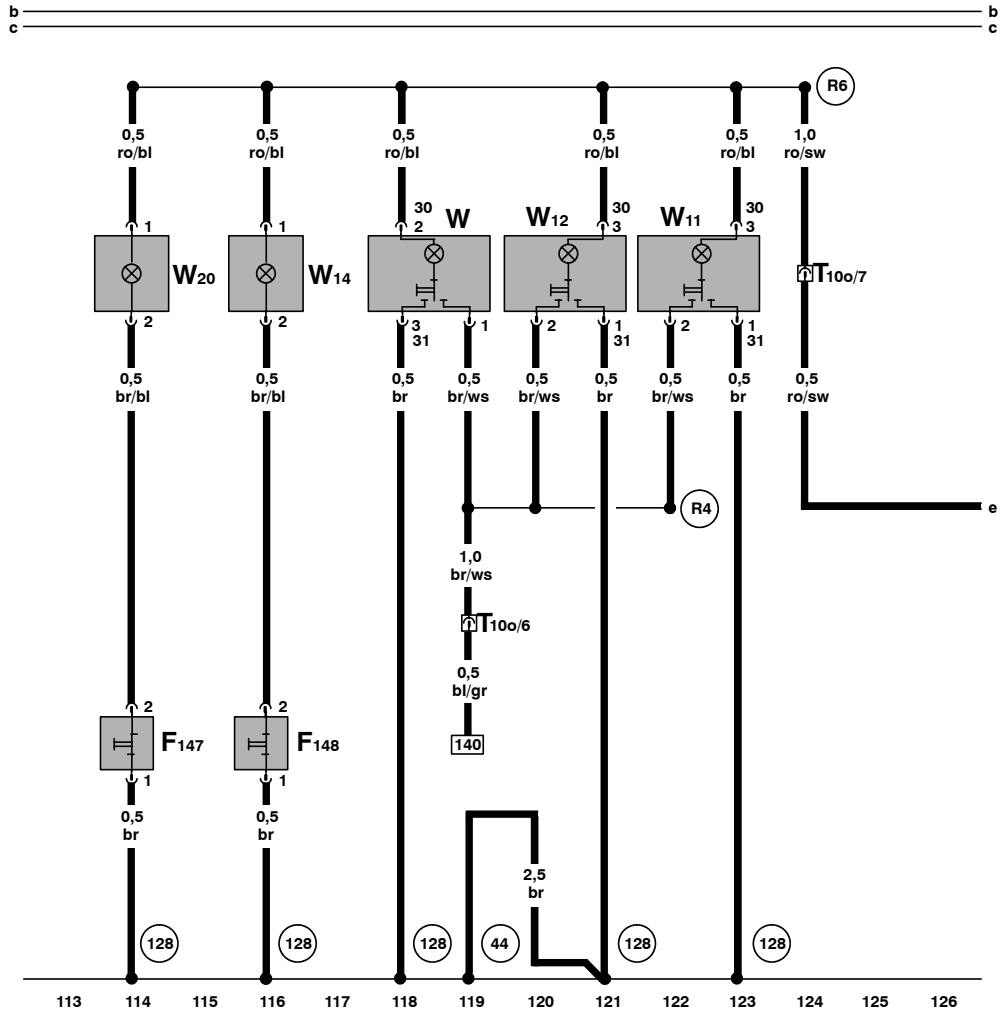


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- F147 - Left Make-Up Mirror Light Switch
- F148 - Right Make-Up Mirror Light Switch
- T10o - 10-Pin Connector, red, connector station A-pillar, left
- W - Front Interior Light
- W11 - Left Rear Reading Light
- W12 - Right Rear Reading Light
- W14 - Right Make-up Mirror Light
- W20 - Left Make-up Mirror Light

- (44) - Ground connection, on left A-pillar, lower part
- (128) - Ground connection -1-, in interior light wiring harness
- (R4) - wire connection -1-, in interior light/door contact switch wiring harness

(R6) - plus connection -1-, in interior light wiring harness

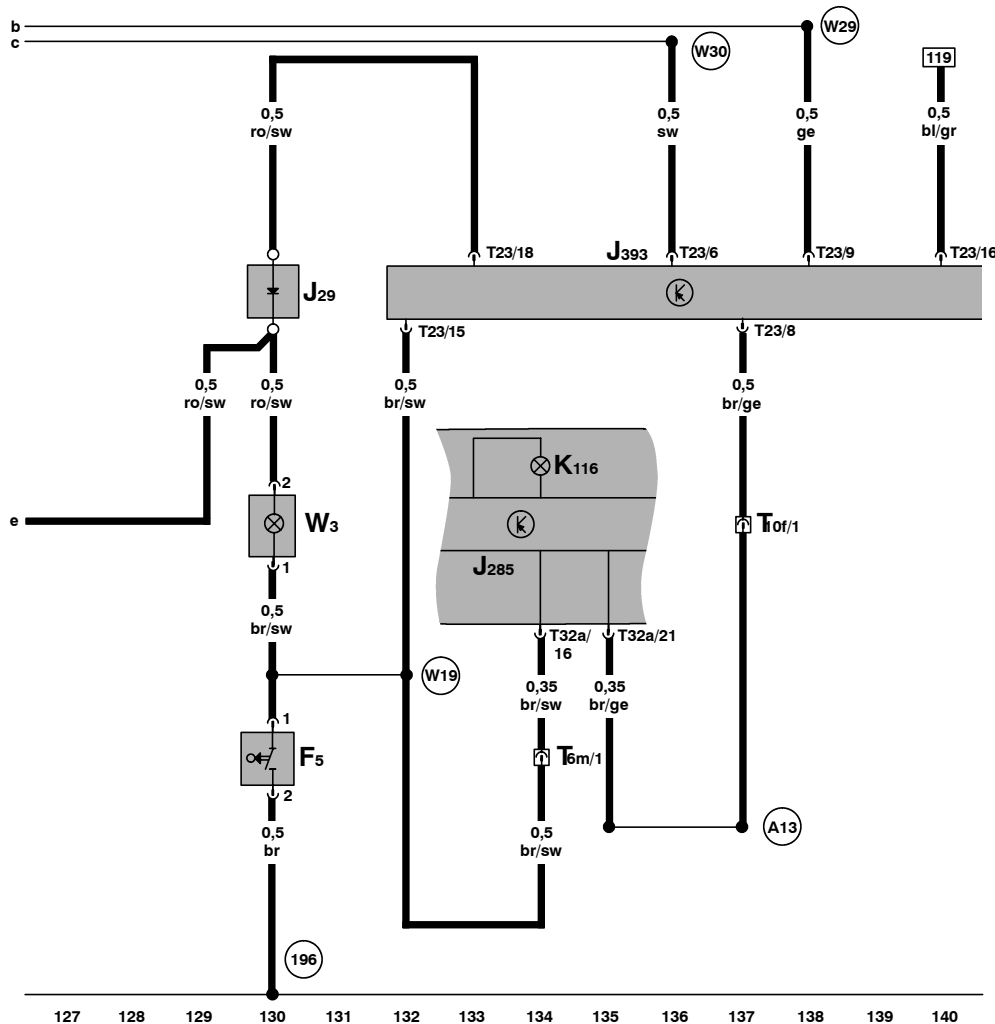


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

97-21879


- F5 - Luggage Compartment Light Switch
- J29 - Blocking Diode, in wiring harness floor, on C-pillar, left, lower part
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- K116 - Warning light for rear lid unlocked
- T6m - 6-Pin Connector, black, connector station A-pillar, right
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T23 - 23-Pin Connector
- T32a - 32-Pin Connector, blue, on instrument cluster
- W3 - Luggage compartment Light

- (196) - Ground connection -3-, in wiring harness, rear
- (A13) - wire connection (door contact switch), in instrument panel wiring harness
- (W19) - Connection -2- (luggage compartment light), in rear wiring harness
- (W29) - Connection (A-Bus), in floor wiring harness
- (W30) - Connection (B-Bus), in floor wiring harness

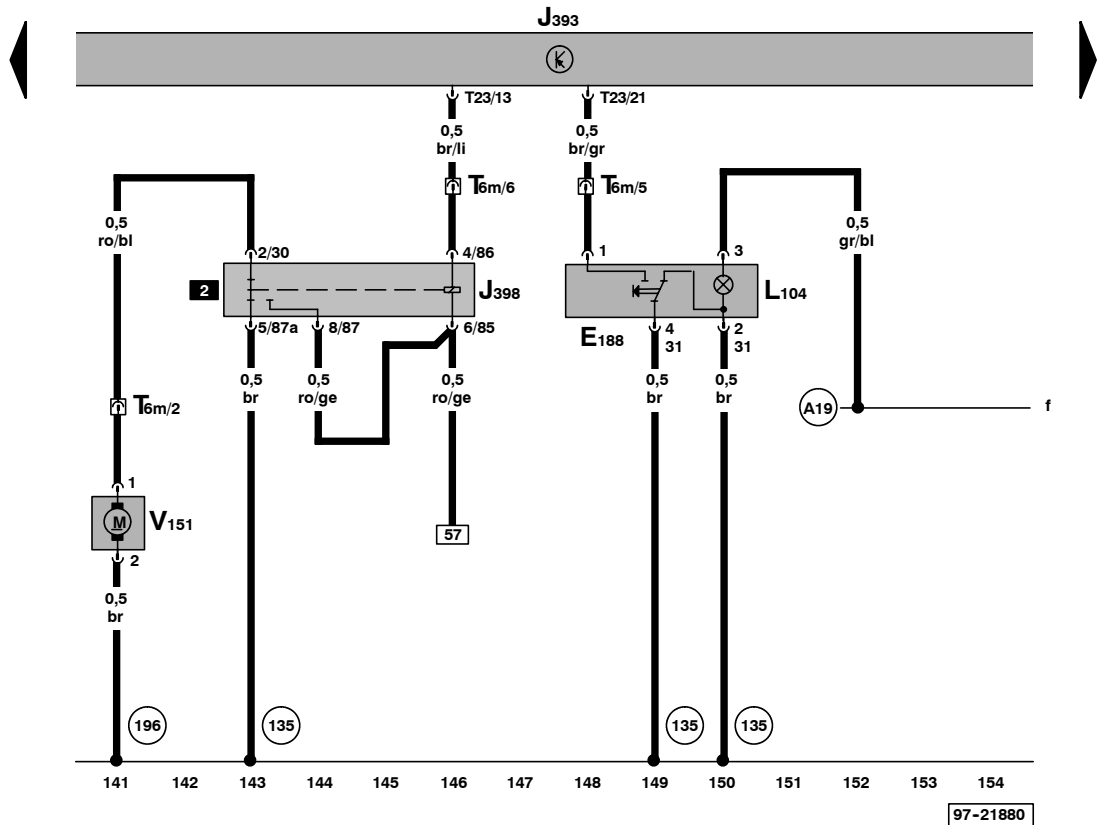

- E188 - Switch for remote unlock, rear lid
- J393 - Central control module for comfort system
- J398 - Relay for motor remote unlock rear lid, above relay panel, production control number (79)
- L104 - Illumination for switch remote unlock
- T6m - 6-Pin Connector, black, connector station A-pillar, right
- T23 - 23-Pin Connector
- V151 - Motor for remote unlock rear lid


- (135) - Ground connection -2-, in instrument panel wiring harness
- (196) - Ground connection -3-, in wiring harness, rear
- (A19) - wire connection (58d), in instrument panel wiring harness

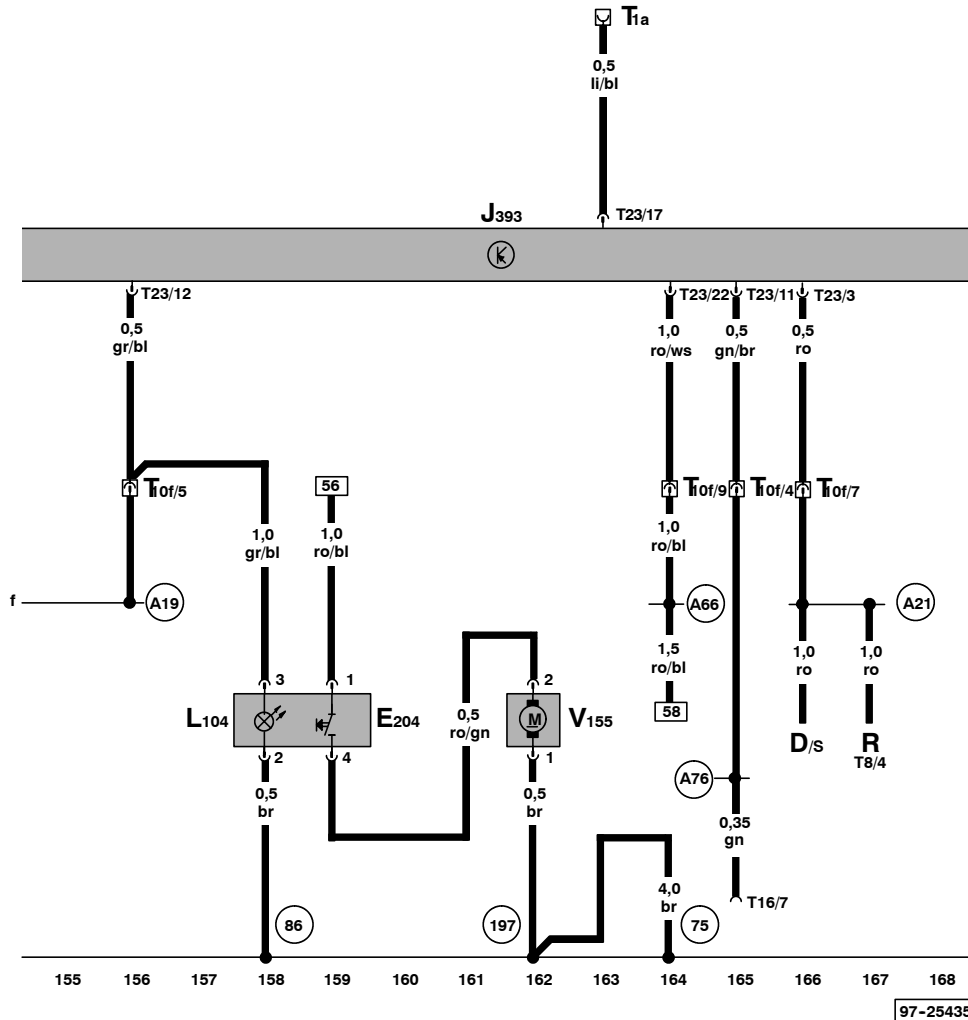

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- D - Ignition/Starter Switch
- E204 - Switch for remote/fuel tank door
- J393 - Central control module for comfort system
- L104 - Illumination for switch remote unlock
- R - Radio
- T1a - Single Connector
- T8 - 8-Pin Connector, black, on radio
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T16 - 16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
- T23 - 23-Pin Connector
- V155 - Motor for fuel tank lid unlock
- (75) - Ground connection, on right rear pillar


- (86) - Ground connection -1-, in rear wiring harness
- (197) - Ground connection -4-, in wiring harness rear
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A21) - wire connection (86s), in instrument panel wiring harness
- (A66) - Connector (30a, central locking/anti-theft warning system/IR), in instrument panel wiring harness
- (A76) - Connector (K-diagnosis wire), in instrument panel wiring harness

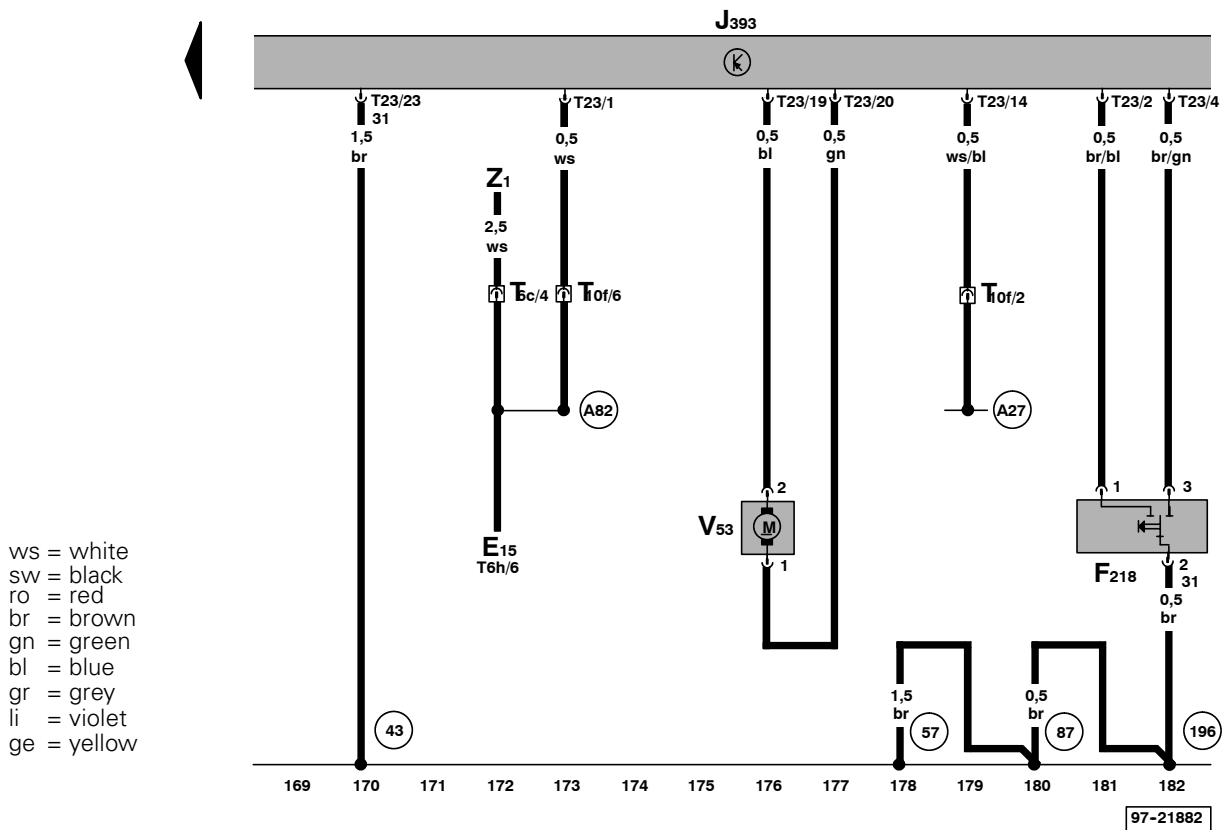

- E15 - Rear window defogger switch
- F218 - Switch for central locking, trunk lid
- J393 - Central control module for comfort system
- T6c - 6-Pin Connector, blue, connector station A-pillar, left
- T6h - 6-Pin Connector, black, on rear window defogger switch -E15-
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T23 - 23-Pin Connector
- V53 - Decklid Central Locking System Motor
- Z1 - Heated rear window

- (57) - Ground connection, on left rear pillar
- (87) - Ground connection -2-, in rear wiring harness
- (196) - Ground connection -3-, in wiring harness, rear
- (A27) - wire Connection (vehicle speed signal), in instrument panel wiring harness
- (A82) - Connector (heated glass), in instrument panel wiring harness

- (43) - Ground connection, on right A-pillar, lower part

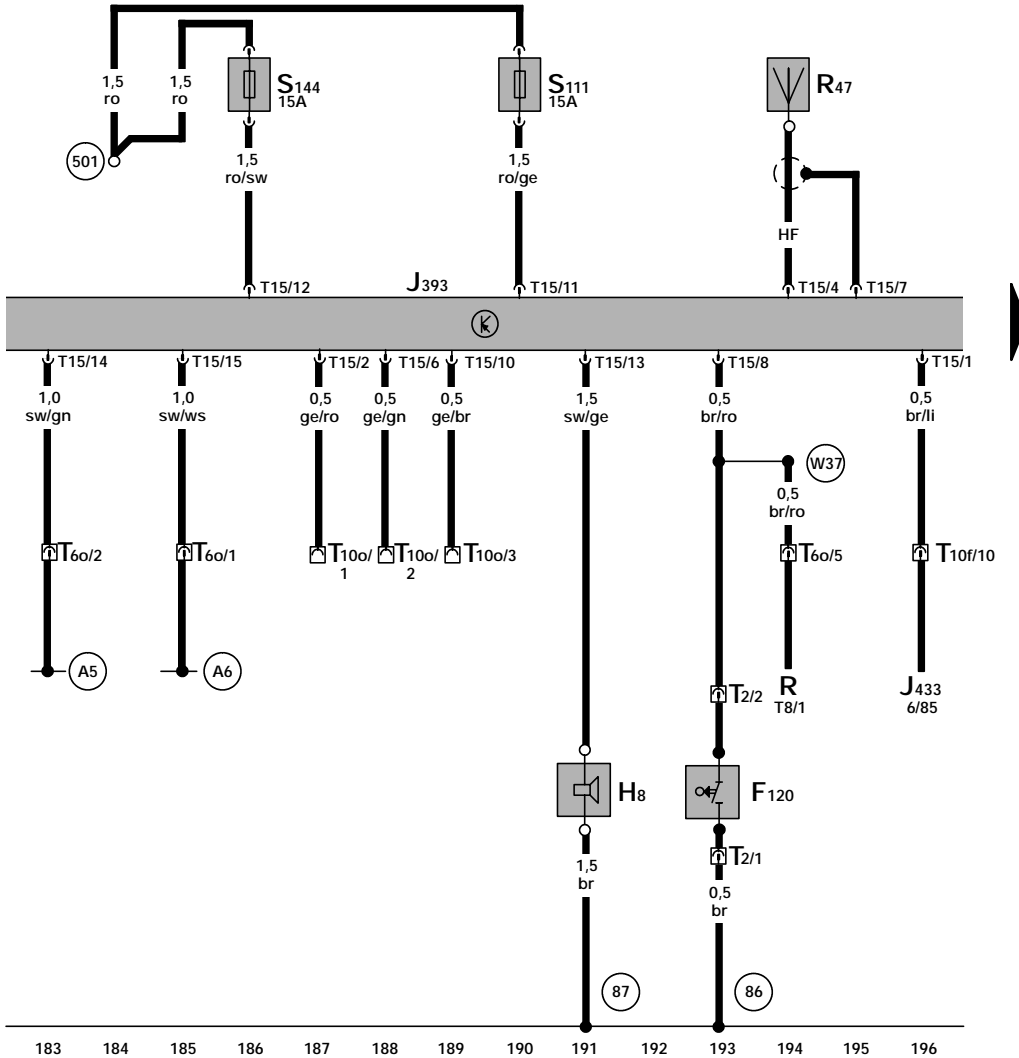


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

97-30005

- F120 - Hood Alarm Switch
- H8 - Alarm Horn
- J393 - Central control module for comfort system
- J433 - Lock relay for starter (theft warning system), above relay panel
- R - Radio
- R47 - Antenna wire for central locking and anti-theft warning system, on A-pillar right
- S111 - Fuse -1- for Alarm System, on eight position auxiliary relay panel, behind relay panel
- S144 - Fuse -2- for Alarm System, on eight position auxiliary relay panel, behind relay panel
- T60 - 6-Pin Connector, white, connector station A-pillar, right
- T2 - Double Connector
- T8 - 8-Pin Connector, on radio
- T10f - 10-Pin Connector, blue, connector station A-pillar, left

- T10o - 10-Pin Connector, red, connector station A-pillar, left
- T15 - 15-Pin Connector, on Central control module for comfort system
- 86 - Ground connection -1-, in rear wiring harness
- 87 - Ground connection -2-, in rear wiring harness
- 501 - Threaded connection -2- (30) on the relay plate
- A5 - plus connection (right turn signal), in instrument panel wiring harness
- A6 - plus connection (left turn signal), in instrument panel wiring harness
- W37 - Connection (alarm), in floor wiring harness

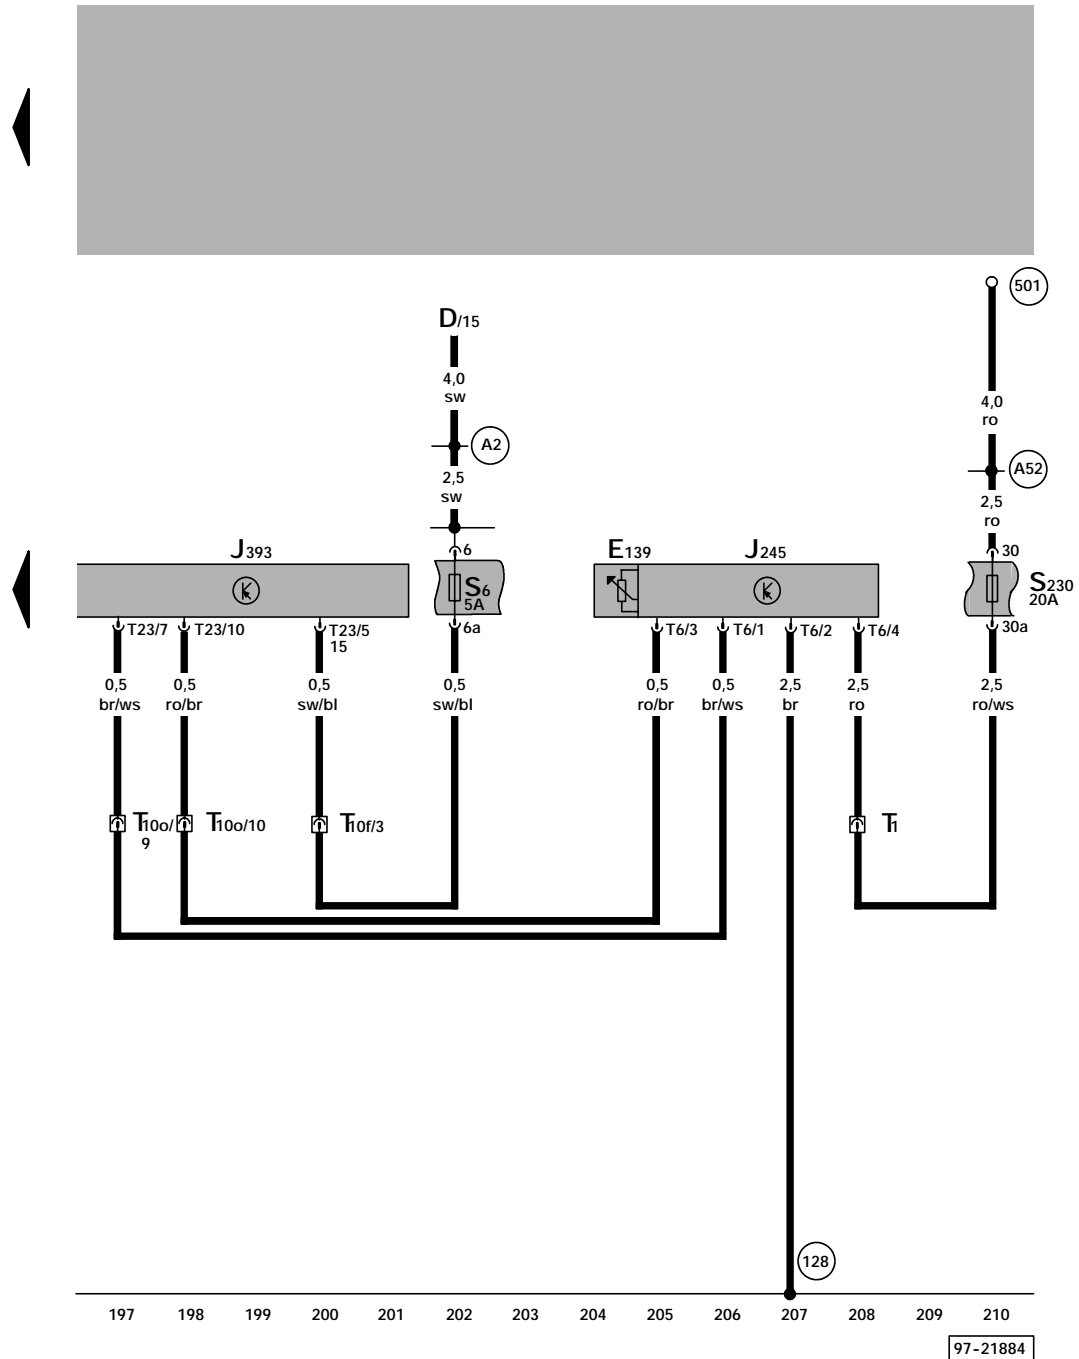

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

197 198 199 200 201 202 203 204 205 206 207 208 209 210

97-21884

- D - Ignition/Starter Switch
- E139 - Sunroof Regulator
- J245 - Power Sunroof Control Module
- J393 - Central control module for comfort system
- S6 - Fuse 6 in fuse holder
- S230 - Fuse 30 in fuse holder
- T1 - Single Connector, black
- T4k - 4-Pin Connector
- T6 - 6-Pin Connector
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T10o - 10-Pin Connector, red, connector station A-pillar, left
- T23 - 23-Pin Connector

- (128) - Ground connection -1-, in interior light wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (A2) - plus connection (15), in instrument panel wiring harness
- (A52) - plus connection (30), in instrument panel wiring harness