



Monsoon-Soundsystem

from August 1999

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

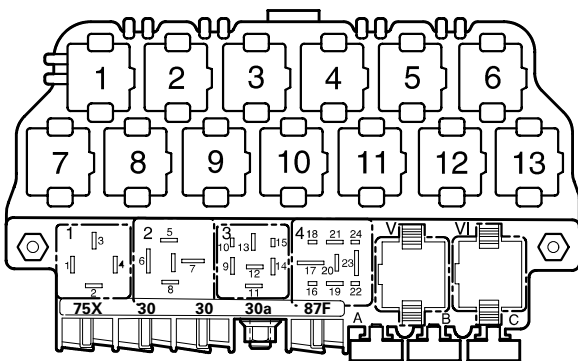

97-20676

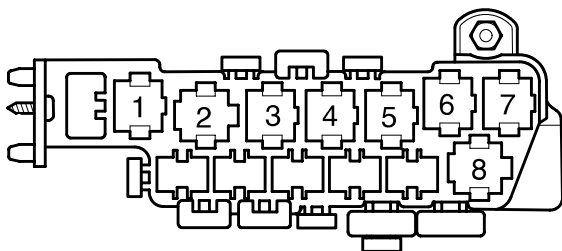


97-20515

Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige




ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

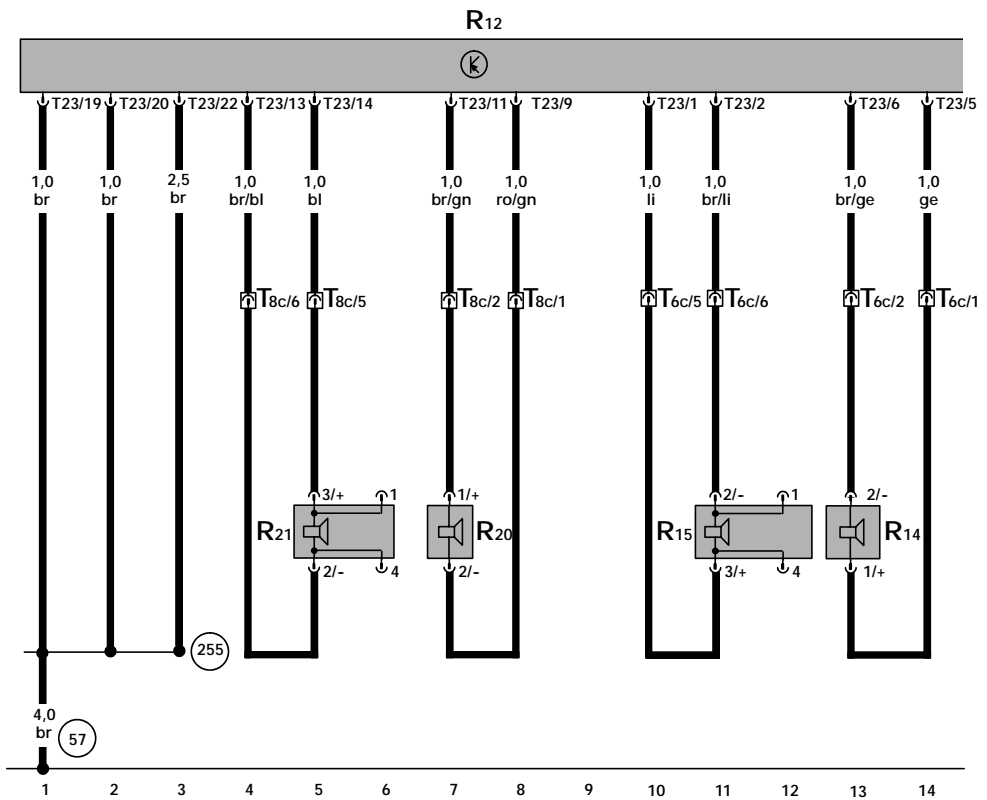


- R12 - Amplifier
- R14 - Treble speaker, left rear, in left rear door
- R15 - Bass speaker, left rear, in left rear door
- R20 - Treble speaker, left front, in driver's door
- R21 - Bass speaker, left front, in driver's door
- T6c - 6-Pin Connector, red, on B-pillar, left
- T8c - 8-Pin Connector, black, connector station A-pillar, left
- T23 - 23-Pin Connector, on Amplifier

- (57) - Ground connection , on left rear pillar
- (255) - Ground connection -1-, in wiring harness Radio

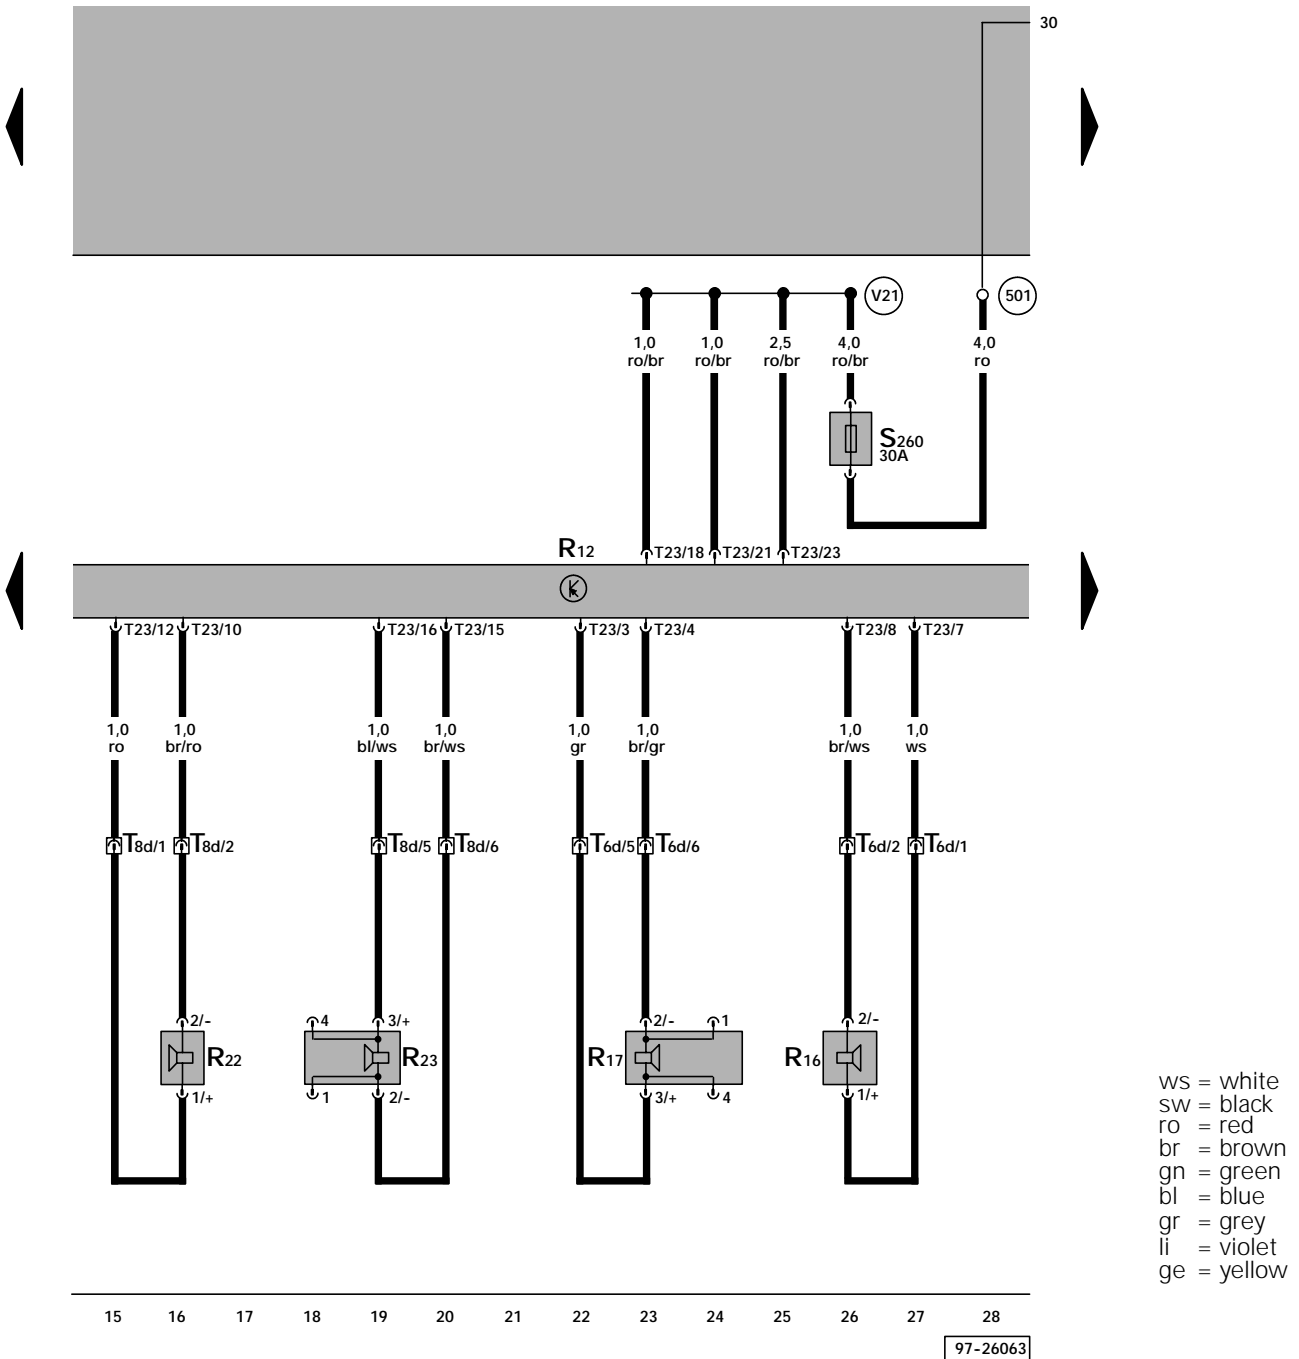

- R12 - Amplifier
- R16 - Treble speaker, right rear, in right rear door
- R17 - Bass speaker, right rear, in right rear door
- R22 - Treble speaker, right front, in passenger's door
- R23 - Bass speaker, right front, in passenger's door
- S260 - Amplifier/DSP Fuse
- T6d - 6-Pin Connector, red, on B-pillar, right
- T8d - 8-Pin Connector, black, connector station A-pillar, right
- T23 - 23-Pin Connector, on Amplifier


- (501) - Threaded connection -2- (30) on the relay plate
- (V21) - Plus connector (30), in wiring harness Radio-Amplifier

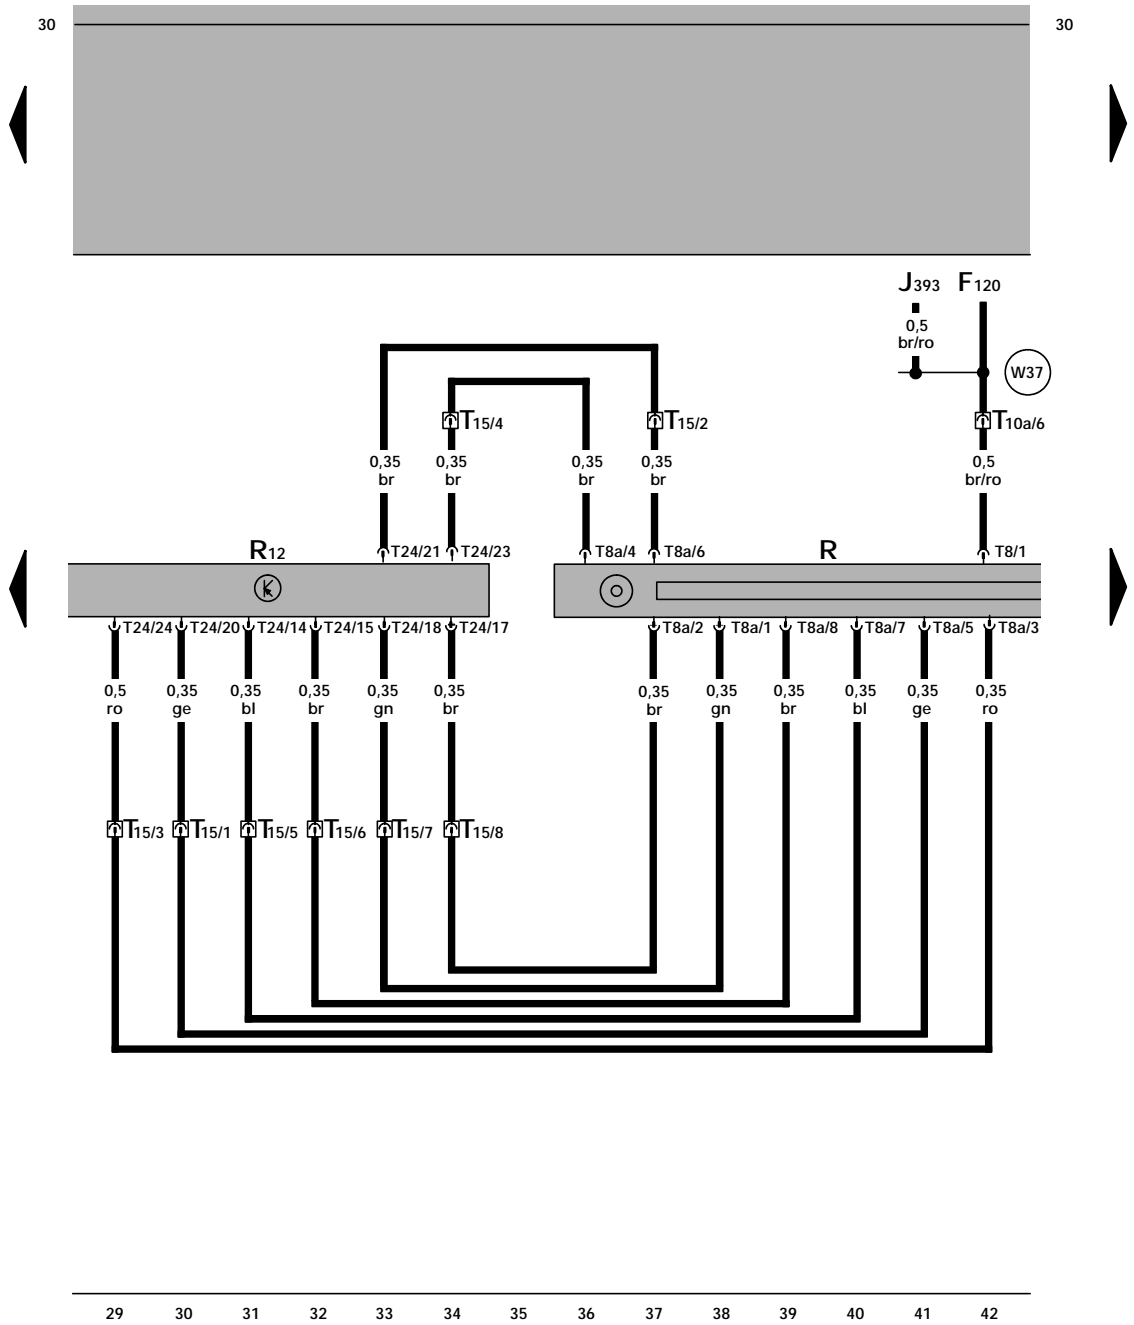

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow
 or = orange

- F120 - Hood Alarm Switch
- J393 - Central control module for comfort system
- R - Radio
- R12 - Amplifier
- T8 - 8-Pin Connector, black, on radio
- T8a - 8-Pin Connector, brown, on radio
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T15 - 15-Pin Connector, white, connector station A-pillar, left
- T24 - 24-Pin Connector, on Amplifier

(W37) - Connection (alarm), in floor wiring harness

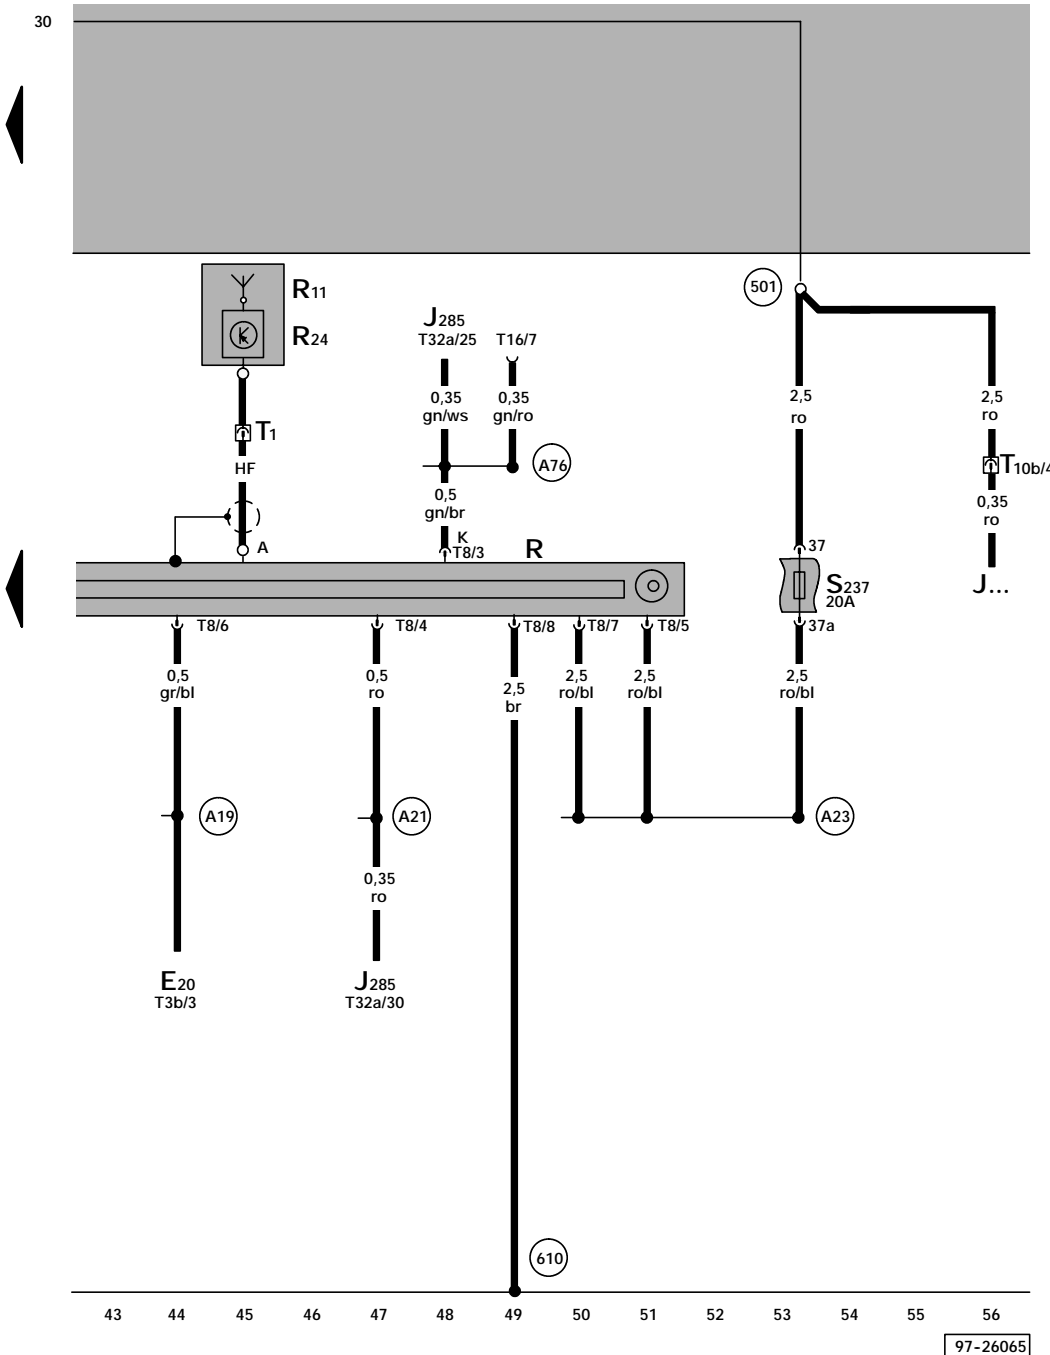

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E20 - Instrument Panel Light Dimmer Switch
- J... - Engine Control Module (ECM)
- J285 - Control module with indicator unit in instrument panel insert
- R - Radio
- R11 - Antenna
- R24 - Antenna Amplifier
- S237 - Fuse 37 in fuse holder
- T1 - 1-Pin Connector, black, below console
- T3b - 3-Pin Connector
- T8 - 8-Pin Connector, black, on radio
- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- T16 - 16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
- T32a - 32-Pin Connector, blue, on instrument cluster

- (501) - Threaded connection -2- (30) on the relay plate
- (610) - ground connection (audio), under center console
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A21) - wire connection (86s), in instrument panel wiring harness
- (A23) - wire connection (30a), in instrument panel wiring harness
- (A76) - Connector (K-diagnosis wire), in instrument panel wiring harness