

Daytime Running Lights (DRL),

from August 1999

Notes:

Information for

- ◆ *Relay and fuse arrangements*
 - ◆ *Connector arrangements*
 - ◆ *Control Modules and Relays*
 - ◆ *Ground connections*
- ⇒ *Component Locations!*


Information for

- ◆ *Troubleshooting Procedures*
- ⇒ *Guided Fault Finding using VAS 5051/5052*

Light Switch

- D - Ignition/Starter Switch
- E1 - Light switch
- E4 - Headlight Dimmer/Flasher Switch
- E23 - Fog Light Switch
- J5 - Fog Light Relay, on auxiliary relay panel, production control number (381)
- K17 - Fog Light Indicator Light
- L9 - Headlight Switch Light
- S236 - Fuse 36 in fuse holder
- T12 - 12-Pin Connector
- T32a - 32-Pin Connector, blue, on instrument cluster

- (32) - Ground connection, behind instrument panel, left
- (81) - Ground connection -1-, in instrument panel wiring harness
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A32) - plus connection (30), in instrument panel wiring harness
- (A51) - wire connection (56) in instrument panel wiring harness
- (A83) - Connection (daytime running lights), in instrument panel wiring harness
- (A85) - Connection (58R) in instrument panel wiring harness
- (A113) - Connection 2 (daytime running lights), in instrument panel wiring harness

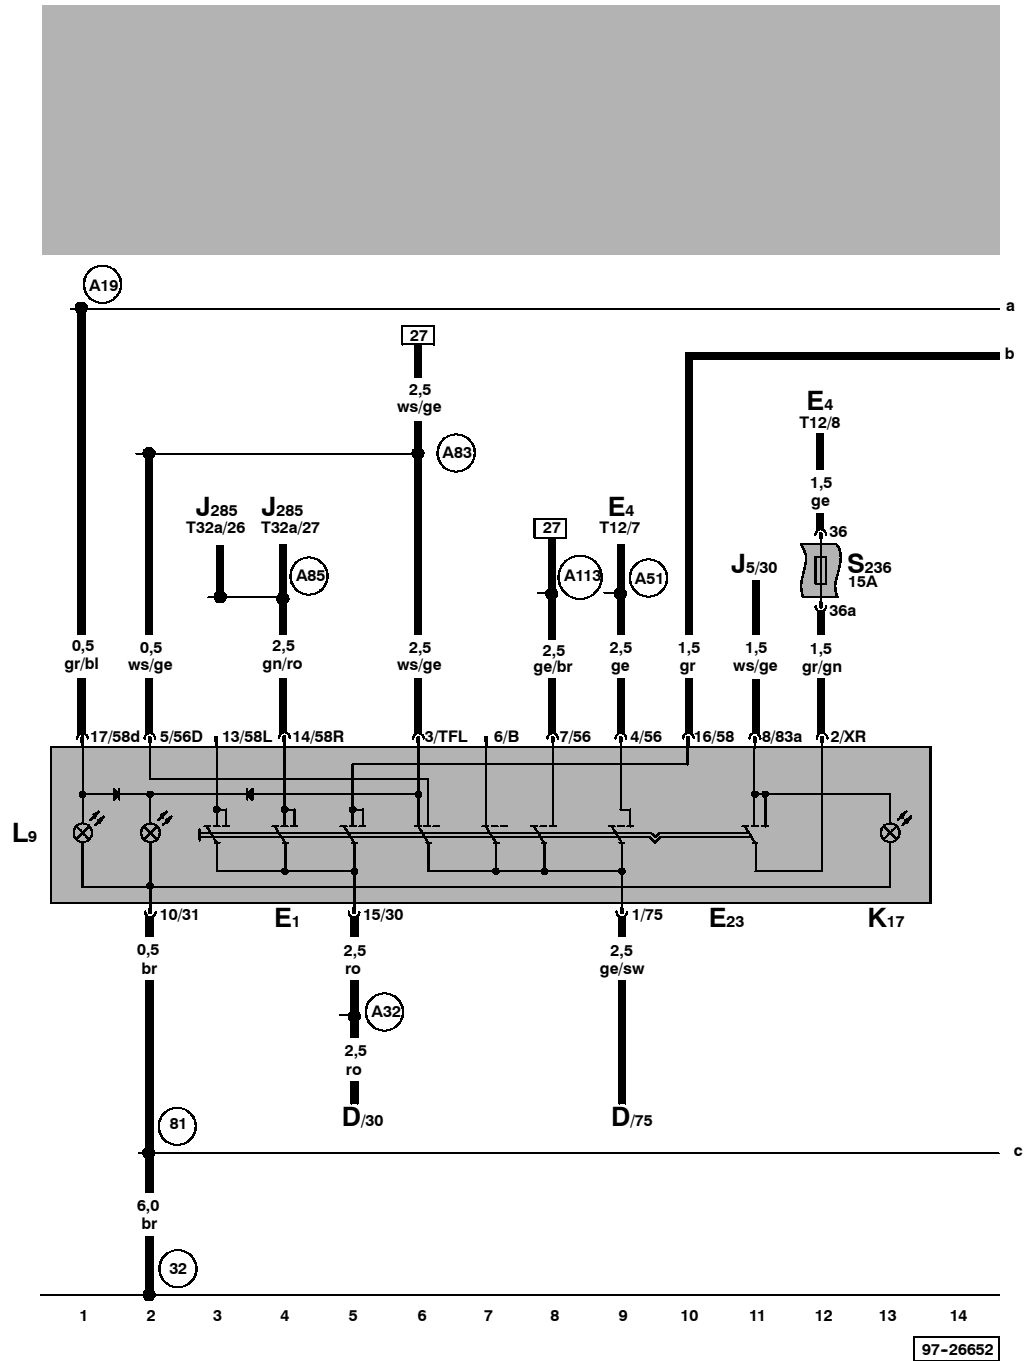

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Instrument panel light dimmer switch, daytime running lights change-over relay

- E20 - Instrument Panel Light Dimmer Switch
- F9 - Parking Brake Warning Light Switch
- J89 - Daytime Running Lights Change-over Relay (173) on the thirteen position relay panel, above relay panel


- N74 - Series Resistance Wiring
- S3 - Fuse 3 in fuse holder
- T3b - 3-Pin Connector
- T6v - 6-Pin Connector, violet, connector station A-pillar, right

- W6 - Glove Compartment Light

- (81) - Ground connection -1-, in instrument panel wiring harness
- (135) - Ground connection -2-, in instrument panel wiring harness
- (503) - Screw connection (75x), on relay panel

- A3 - plus connection (58), in instrument panel wiring harness
- A19 - wire connection (58d), in instrument panel wiring harness
- A37 - wire connection (58a), in instrument panel wiring harness
- A80 - Connection -1- (X), in instrument panel wiring harness
- A115 - Connection (parking brake warning light), in instrument panel wiring harness

- * - when equipped with Multi-Function Steering Wheel

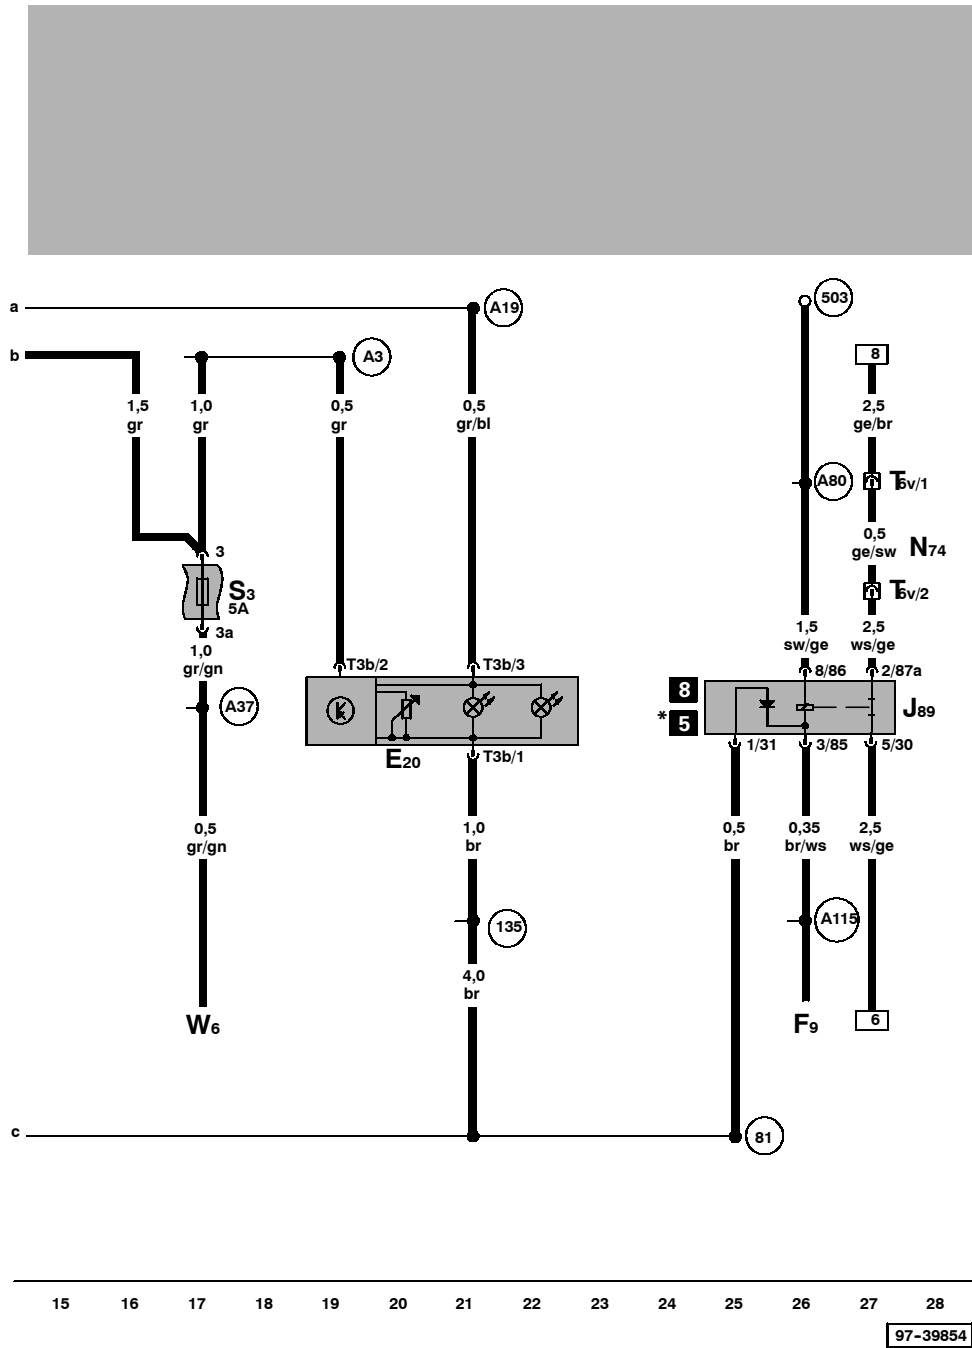

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange