


# Automatic day/night interior mirror,

# Rainsensor

from October 2000

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

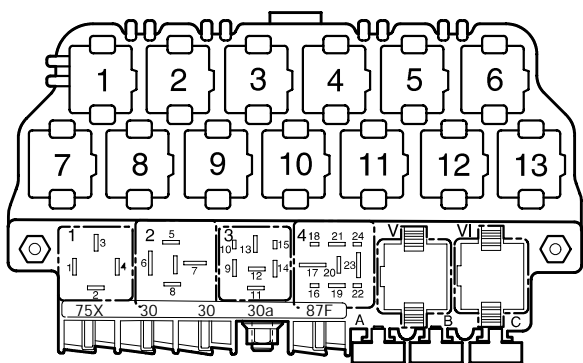


97-20676

Relay location on the thirteen position auxiliary relay panel, above relay panel:

Relay panel:

- V** Wiper/Washer Intermittent Relay(377)
- VI**

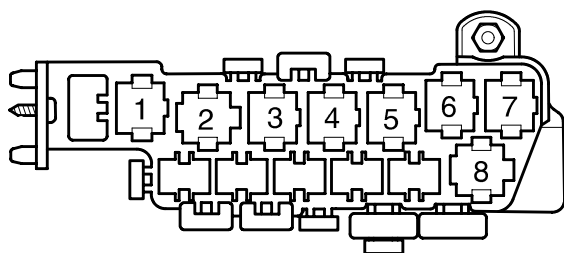


97-20515

Relay location on the eight position auxiliary relay panel, behind relay panel:

Note: Number in parentheses indicates production control number stamped on relay housing.

- Fuse colors
- 30 A - green
  - 25 A - white
  - 20 A - yellow
  - 15 A - blue
  - 10 A - red
  - 7,5 A - brown
  - 5 A - beige

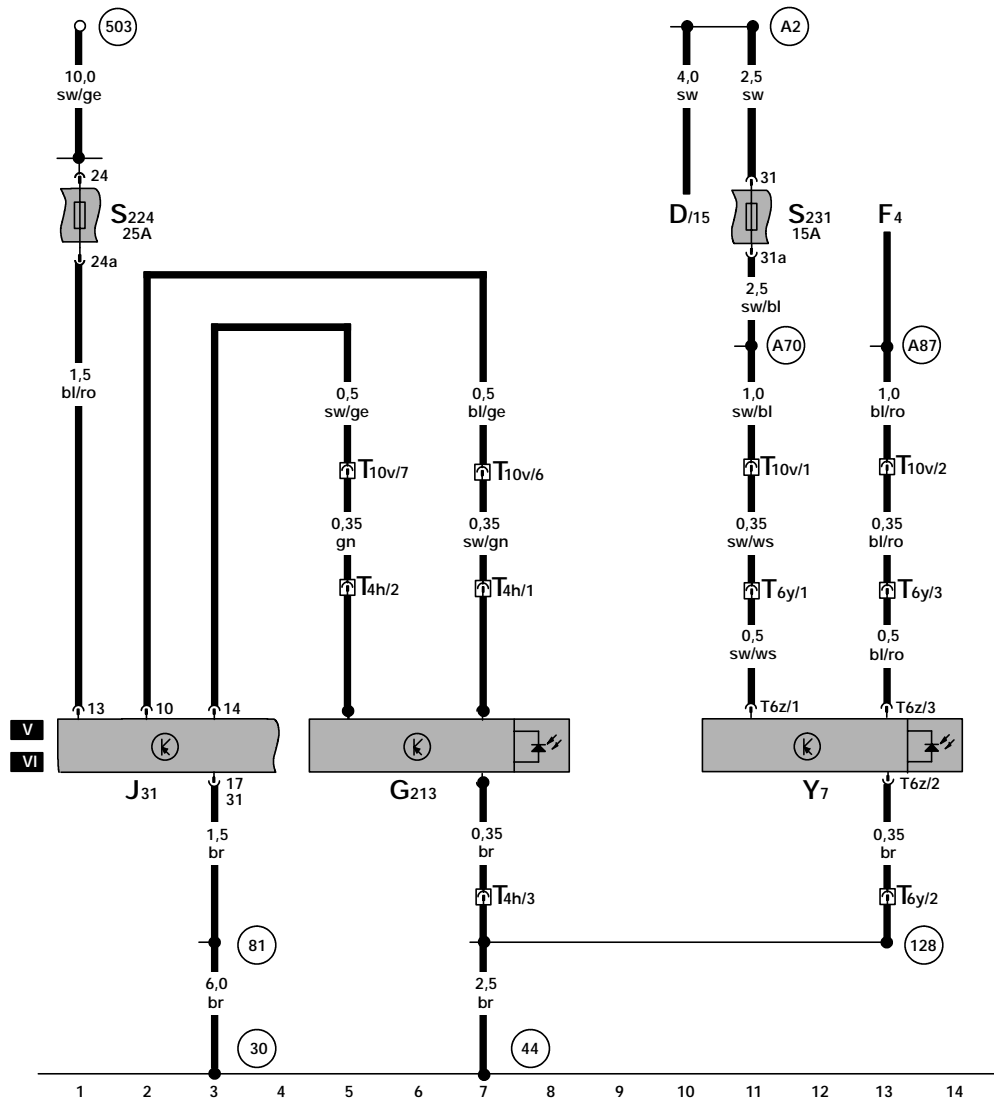

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

97-29452

- D - Ignition/Starter Switch
- F4 - Back-Up Light Switch
- G213 - Rain Sensor
- J31 - Wiper/Washer Intermittent Relay
- S224 - Fuse in fuse holder
- S231 - Fuse in fuse holder
- T4h - 4-Pin Connector, black, near mirror under the roof
- T6y - 6-Pin Connector, black, near mirror under the roof
- T6z - 6-Pin Connector
- T10v - 10-Pin Connector, green, connector station A-pillar, left
- Y7 - Automatic Day/Night Interior Mirror

- 30 - Ground connection -1-, beside fuse/relay panel
- 44 - Ground connection, on left A-pillar, lower part
- 81 - Ground connection -1-, in instrument panel wiring harness
- 128 - Ground connection -1-, in interior light wiring harness
- 503 - Bolted Connection (75x) (at relay panel)
- A2 - plus connection (15), in instrument panel wiring harness
- A70 - Connector (15a, fuse 231), in instrument panel wiring harness
- A87 - Connector (reverse lamp), in instrument panel wiring harness