


Fuse arrangement in fuse panel, behind instrument cluster, left

Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

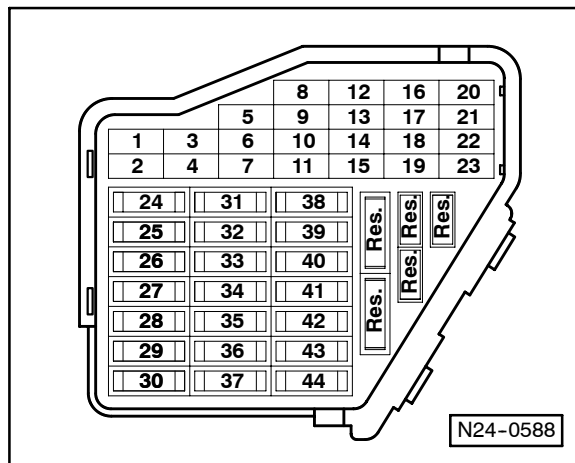

Fuses S24 to S44 are identified with additional prefix 2 in wiring diagram

Example: fuse S40 on fuse panel is listed as S240 in wiring diagram

Fuses:

1 - Heated washer nozzle	5 A	23 - Parklight, left	5 A
2 - Turn signal system	10 A	24 - Wiper system	25 A
3 - Light for glove compartment, air conditioning, selector lever	5 A	25 - Fresh air blower, recirculating control, air conditioning	30 A
4 - License plate light	5 A	26 - Rear window defogger	30 A
5 - Instr. cluster, heated seats, cruise control test plug, air conditioning	10 A	27 - Rear window wiper system	15 A
6 - Control module comfort system	5 A	28 - Fuel pump (FP)	15 A
7 - ABS	10 A	29 - Engine control	20 A
8 - Automatic headlight beam adjusting, telephone system	5 A	30 - Sunroof	20 A
9 - free	10 A	31 - Back-up lights, cruise control, automatic transmission	15 A
10 - CD changer unit	5 A	32 - Engine control	20 A
11 - Cruise control by automatic transmission	5 A	33 - Cigarette lighter	15 A
12 - B+(battery positiv voltage) for on board diagnostic (OBD)	10 A	34 - Engine control, injectors	15 A
13 - Brake lights	10 A	35 - Trailer socket	30 A
14 - Comfort system	10 A	36 - Fog lights	15 A
15 - Instr. cluster, automatic transmission	10 A	37 - Radio system, telephone system	20 A
16 - free	5 A	38 - Comfort system	15 A
17 - Navigation	10 A	39 - Emergency flasher system	15 A
18 - Right headlight, high beam	10 A	40 - Dual horn	25 A
19 - Left headlight, high beam	10 A	41 - free	25 A
20 - Right headlight, low beam	15 A	42 - free	25 A
21 - Left headlight, low beam	15 A	43 - free	10 A
22 - Parklight, right	5 A	44 - Heated seats	30 A